

# User Manual

## ZKBio610

Date: August 2020

Doc Version: 1.0

English

Thank you for choosing our product. Please read the instructions carefully before operation. Follow these instructions to ensure that the product is functioning properly. The images shown in this manual are for illustrative purposes only.



For further details, please visit our Company's website  
[www.zkteco.com](http://www.zkteco.com).

Copyright © 2020 ZKTECO CO., LTD. All rights reserved.

Without the prior written consent of ZKTeco, no portion of this manual can be copied or forwarded in any way or form. All parts of this manual belong to ZKTeco and its subsidiaries (hereinafter the "Company" or "ZKTeco").

## Trademark

**ZKTeco** is the registered trademark of ZKTeco. Other trademarks involved in this manual are owned by their respective owners.

## Disclaimer

This manual contains information on the operation and maintenance of the ZKTeco equipment. The copyright in all the documents, drawings, etc. in relation to the ZKTeco supplied equipment vests in and is the property of ZKTeco. The contents hereof should not be used or shared by the receiver with any third party without express written permission of ZKTeco.

The contents of this manual must be read as a whole before starting the operation and maintenance of the supplied equipment. If any of the content(s) of the manual seems unclear or incomplete, please contact ZKTeco before starting the operation and maintenance of the said equipment.

It is an essential pre-requisite for the satisfactory operation and maintenance that the operating and maintenance personnel are fully familiar with the design and that the said personnel have received thorough training in operating and maintaining the machine/unit/equipment. It is further essential for the safe operation of the machine/unit/equipment that personnel has read, understood and followed the safety instructions contained in the manual.

In case of any conflict between terms and conditions of this manual and the contract specifications, drawings, instruction sheets or any other contract-related documents, the contract conditions/documents shall prevail. The contract specific conditions/documents shall apply in priority.

ZKTeco offers no warranty, guarantee or representation regarding the completeness of any information contained in this manual or any of the amendments made thereto. ZKTeco does not extend the warranty of any kind, including, without limitation, any warranty of design, merchantability or fitness for a particular purpose.

ZKTeco does not assume responsibility for any errors or omissions in the information or documents which are referenced by or linked to this manual. The entire risk as to the results and performance obtained from using the information is assumed by the user.

ZKTeco in no event shall be liable to the user or any third party for any incidental, consequential, indirect, special, or exemplary damages, including, without limitation, loss of business, loss of profits, business interruption, loss of business information or any pecuniary loss, arising out of, in connection with, or

relating to the use of the information contained in or referenced by this manual, even if ZKTeco has been advised of the possibility of such damages.

This manual and the information contained therein may include technical, other inaccuracies or typographical errors. ZKTeco periodically changes the information herein which will be incorporated into new additions/amendments to the manual. ZKTeco reserves the right to add, delete, amend or modify the information contained in the manual from time to time in the form of circulars, letters, notes, etc. for better operation and safety of the machine/unit/equipment. The said additions or amendments are meant for improvement /better operations of the machine/unit/equipment and such amendments shall not give any right to claim any compensation or damages under any circumstances.

ZKTeco shall in no way be responsible (i) in case the machine/unit/equipment malfunctions due to any non-compliance of the instructions contained in this manual (ii) in case of operation of the machine/unit/equipment beyond the rate limits (iii) in case of operation of the machine and equipment in conditions different from the prescribed conditions of the manual.

The product will be updated from time to time without prior notice. The latest operation procedures and relevant documents are available on <http://www.zkteco.com>

If there is any issue related to the product, please contact us.

## ZKTeco Headquarters

**Address**            ZKTeco Industrial Park, No. 26, 188 Industrial Road,  
Tangxia Town, Dongguan, China.

**Phone**            +86 769 - 82109991

**Fax**                +86 755 - 89602394

For business related queries, please write to us at: [sales@zkteco.com](mailto:sales@zkteco.com).

To know more about our global branches, visit [www.zkteco.com](http://www.zkteco.com).

## About the Company

ZKTeco is one of the world's largest manufacturers of RFID and Biometric (Fingerprint, Facial, Finger-vein) readers. Product offerings include Access Control readers and panels, Near & Far-range Facial Recognition Cameras, Elevator/floor access controllers, Turnstiles, License Plate Recognition (LPR) gate controllers and Consumer products including battery-operated fingerprint and face-reader Door Locks. Our security solutions are multi-lingual and localized in over 18 different languages. At the ZKTeco state-of-the-art 700,000 square foot ISO9001-certified manufacturing facility, we control manufacturing, product design, component assembly, and logistics/shipping, all under one roof.

The founders of ZKTeco have been determined for independent research and development of biometric verification procedures and the productization of biometric verification SDK, which was initially widely applied in PC security and identity authentication fields. With the continuous enhancement of the development and plenty of market applications, the team has gradually constructed an identity authentication ecosystem and smart security ecosystem, which are based on biometric verification techniques. With years of experience in the industrialization of biometric verifications, ZKTeco was officially established in 2007 and now has been one of the globally leading enterprises in the biometric verification industry owning various patents and being selected as the National High-tech Enterprise for 6 consecutive years. Its products are protected by intellectual property rights.

## About the Manual

This manual introduces the operations of ZKBio610 product.

All figures displayed are for illustration purposes only. Figures in this manual may not be exactly consistent with the actual products.






## Document Conventions

Conventions used in this manual are listed below:

### GUI Conventions

For Software	
Convention	Description
<b>Bold font</b>	Used to identify software interface names e.g. <b>OK</b> , <b>Confirm</b> , <b>Cancel</b>
>	Multi-level menus are separated by these brackets. For example, File > Create > Folder.
For Device	
Convention	Description
< >	Button or key names for devices. For example, press <OK>
[ ]	Window names, menu items, data table, and field names are inside square brackets. For example, pop up the [New User] window
/	Multi-level menus are separated by forwarding slashes. For example, [File/Create/Folder].

### Symbols

Convention	Description
	This implies about the notice or pays attention to, in the manual
	The general information which helps in performing the operations faster
	The information which is significant
	Care taken to avoid danger or mistakes
	The statement or event that warns of something or that serves as a cautionary example.

## Table of Contents

<b>1</b>	<b>SAFETY INSTRUCTIONS.....</b>	<b>6</b>
<b>2</b>	<b>OVERVIEW.....</b>	<b>6</b>
<b>3</b>	<b>PACKING LIST .....</b>	<b>7</b>
3.1	STANDARD ACCESSORIES .....	7
3.2	OPTIONAL ACCESSORIES .....	7
<b>4</b>	<b>SYSTEM VIEW.....</b>	<b>8</b>
4.1	REAR VIEW.....	8
4.2	BACK VIEW .....	9
4.3	SPECIFICATIONS.....	9
4.4	INTERNAL LAYOUT .....	10
<b>5</b>	<b>PIN DEFINITION .....</b>	<b>11</b>
5.1	CPU.....	11
5.2	FAN PIN.....	11
5.3	RAM .....	12
5.4	POWER SUPPLY (MOTHERBOARD PROVIDES THE DC POWER SUPPLY).....	12
5.5	ONBOARD SLOT / CONNECTOR / PIN / JUMPER .....	13
5.5.1	DEFINITION OF DISPLAY PORT PINS: LVDS, INVERT, LVDS_PWR, VGA_H1.....	13
5.5.2	DEFINITION OF COMMON FUNCTION PORT PIN .....	15
5.5.3	OTHER PIN DEFINITIONS: F_PANEL1, CLR_CMOS, AT_SEL.....	17
5.5.4	SLOTS AND CONNECTORS: MSATA1, SATA, 3G/WIFI, SATA_PWR .....	19
<b>6</b>	<b>BIOS SETTINGS .....</b>	<b>20</b>
6.1	MAIN MENU.....	22
6.2	ADVANCED MENU.....	23
6.3	CHIPSET MENU .....	34
6.4	SECURITY MENU .....	38
6.5	BOOT MENU .....	39
6.6	SAVE & EXIT MENU.....	40
<b>7</b>	<b>LCD SURFACE CLEANING .....</b>	<b>41</b>
	<b>CE NOTICE.....</b>	<b>42</b>
	<b>FCC NOTICE.....</b>	<b>42</b>
	<b>WEEE NOTICE.....</b>	<b>42</b>

## 1 Safety Instructions

1. Read these instructions carefully. Keep these instructions for future reference.
2. Please disconnect this equipment from AC outlet before cleaning. Don't use liquid or sprayed detergent for cleaning. Use moisture sheet or cloth for cleaning.
3. Please keep this equipment from humidity.
4. Lay this equipment on a reliable surface when install. A drop or fall could cause injury.
5. Make sure power cord such a way that people cannot step on it. Do not place anything over the power cord.
6. All cautions and warnings on the equipment should be noted.
7. If the equipment is not used for long time, disconnect the equipment from main to avoid being damaged by transient over voltage.
8. Never pour any liquid into opening; this could cause fire or electrical shock.
9. If one of the following situations arises, get the equipment checked by a service personnel:
10. The power cord or plug is damaged.
11. Liquid has penetrated into the equipment.
12. The equipment has been exposed to moisture.
13. The equipment does not work well or you cannot get it work according to user manual.
14. The equipment has dropped and damaged.
15. Do not leave this equipment in an environment unconditioned, storage temperature below -20°C or above 60°C, it may damage the equipment.
16. Unplug the power cord when doing any service or adding optional kits.

### **Lithium Battery Caution:**

1. Danger of explosion can happen if the battery is incorrectly replaced. Replace only the original or equivalent type recommended by the manufacture. Dispose used batteries according to the manufacturer's instructions.
2. Do not remove the cover, and ensure no user serviceable components are inside. Take the unit to the service center for service and repair.

## 2 Overview




This document describes the functionalities of ZKBio610. It is a new generation Point-of-Sales device which facilitates hassle-free transactions. It is the most stable and reliable POS terminal incorporated with an efficient Intel processor. It has a modular design with aluminium alloy material. It supports dual-hinge stand, table stand, and standard VESA mount and thus enabling user-friendly transactions.

### 3 Packing List





#### 3.1 Standard Accessories

a. 	b. 	a) ZKBio610 b) Power Adapter c) Power cord
c. 		

#### 3.2 Optional Accessories

a. 	b. 	c. 
---	---	---



<p>d.</p> 	<p>e.</p> 	<p>f.</p> 
<p>g.</p> 	<p>a. Single MSR b. VFD c. 2<sup>nd</sup> Display d. 1D or 2D Attached Type Barcode Scanner e. 1D or 2D Handheld Type Barcode Scanner f. Thermal Printer g. Cash Drawer</p>	

## 4 System View

### 4.1 Rear View



DC-JACK PS/2 LPT COM VGA USB USB+LAN Audio

☆ Please make sure the 12V DC is plugged-in the right direction before plugging in DC jack.

## 4.2 Back View



## 4.3 Specifications


Display & Touch	LCD Display Size		15" TFT LCD
	Max. Resolution		1024x768
	Brightness		250 cd/m²
	Supported Colours		16.2M/ 262K colours
	Backlight		LED
	Touch Type		Standard Projected Capacitive
Main Board	Processor		Intel® Celeron J1900 QC 2.0GHz
	System Memory		One SO-DIMM socket supports DDR3L 1333 up to 8GB
Storage	HDD		MINI SSD x 1
I/O	USB		X 5 (USB 2.0)
			X 1 (USB 3.0)
	Powered COM		X 1
	LPT		X 1
	Audio Port		x 1 Line-out x1 mic in
Network	LAN		X 1 (RJ45 10/100/1000 Base-T)
Environment	Temperature	Operation	32° to 104° F (0° to 40° C)
		Storage	-4° to 140° F (-20° to 60° C)
	Relative Humidity		20% to 80% non-condensing
Power Supply			12V 5A Power Adapter
OS Support			POS Ready 7 / Win 8.1 Industry / Win 10 IoT Enterprise

Dimensions		460(W) x 490(H) x 315(D) mm(ZK1510) 358(W) x 368(H) x 222(D) mm(ZK1515)
Compliance	Certifications	CE / FCC

**Note:** Intel® Celeron J1900 CPU does not support POS Ready 2009.

## 4.4 Internal Layout

### M/B PCBA

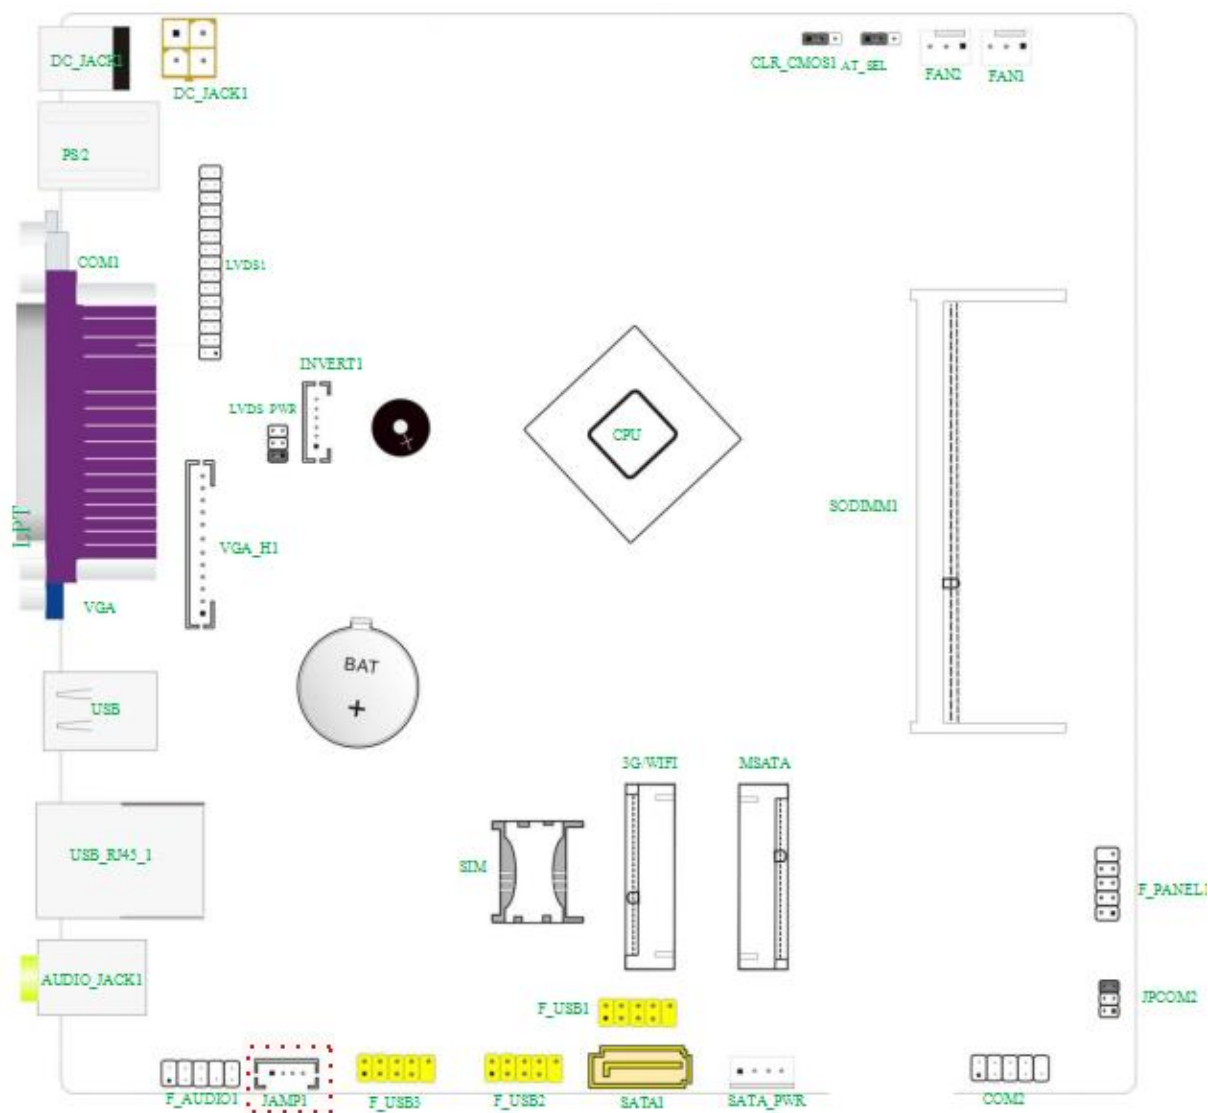

## 5 Pin Definition

In this section, the pin configurations have been described. The definition for each of the pins are also described in the tables.

### 5.1 CPU


This Mainboard uses Intel® Bay Trail J1900 Quad core 2.0GHz CPU. Its frequency can be increased to 2.4GHz.

### 5.2 Fan Pin

The Fan Pin supports the connection of System fan and CPU fan for refrigeration, fan power cord and the connector may be different for each manufacturer.

**FAN1: CPU Fan pin**


**FAN2: System fan pin**



Pin	Definition
1	GND
2	+12V
3	Fan speed detection

## 5.3 RAM


DIMM1: RAM Port (SO-DIMM)

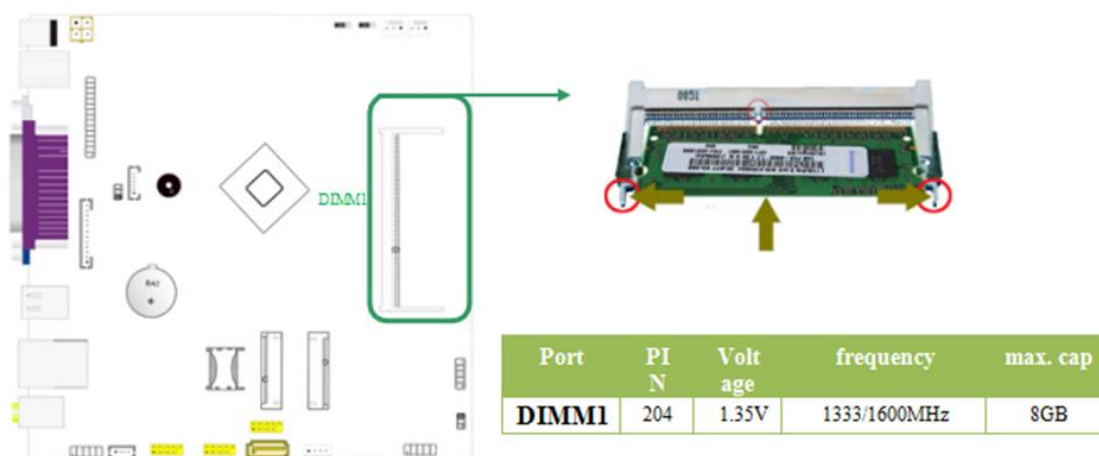

### Memory Unit Assembly and Disassembly

1. To install the memory unit, please use the thumb and index finger to gently hold the memory unit at both the ends. Align the memory pin and slot on the positioning hole, insert at 30 degree oblique angle and gently press down until you hear the locking sound.
2. To remove the memory unit, place your two fingers at both the ends of the slot, then pop up the memory unit.

## 5.4 Power Supply (motherboard provides the DC power supply)

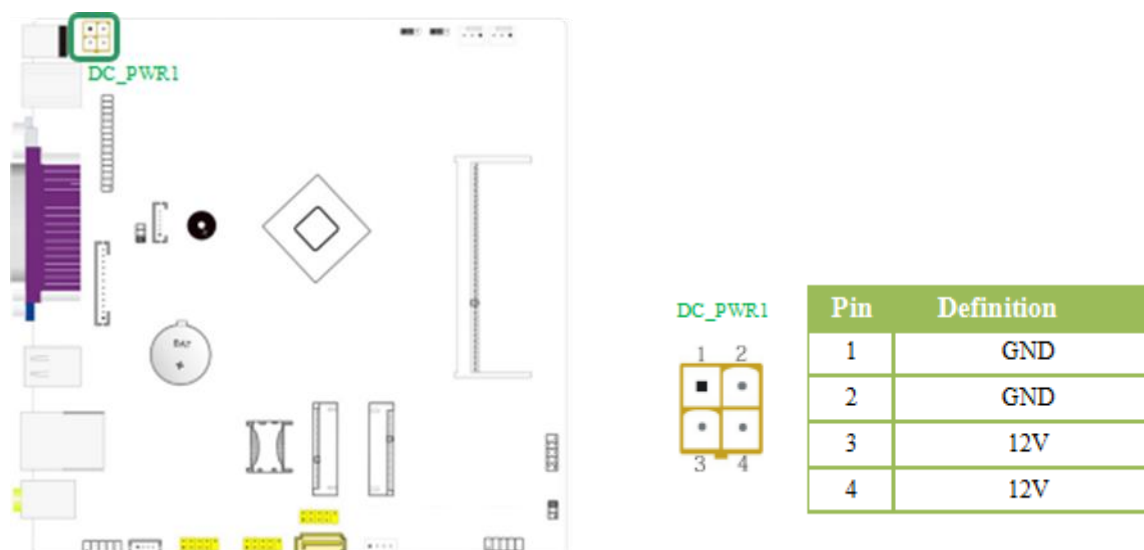

DC 12V DC input / output interface (4Pin)

DC\_PWR1 and backplane IO DC jack cannot be connected simultaneously


## 5.5 Onboard Slot / Connector / Pin / Jumper

### 5.5.1 Definition of Display port pins: LVDS, INVERT, LVDS\_PWR,

#### VGA\_H1

#### LVDS1: LVDS Connector


The Motherboard provides DuPont encapsulated LVDS(Low Voltage Differential Signalling) connector, supports dual-channel 24bit LVDS display port output, and can be connected to a single 6 bit, dual 6 bit, single 8 bit ,dual 8-bit LVDS LCD.

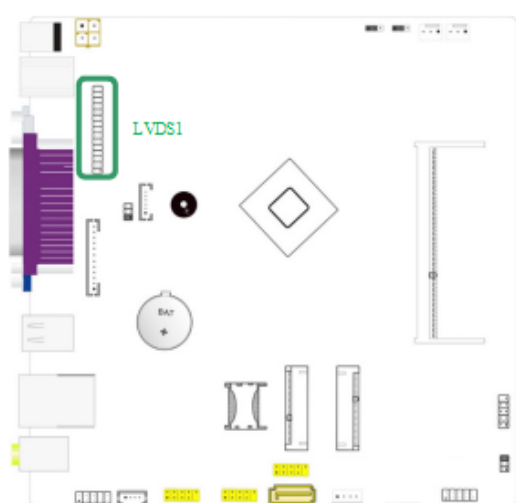

PIN	Definiti on	PIN	Definiti on
1	VCC	2	VCC
3	VCC	4	GND
5	GND	6	GND
7	ADO0-	8	ADO0+
9	ADO1-	10	ADO1+
11	ADO2-	12	ADO2+
13	GND	14	GND
15	ACLK-	16	ACLK+
17	AD03-	18	AD03+
19	BDO0-	20	BDO0+
21	BDO1-	22	BDO1+
23	BDO2-	24	BDO2+
25	GND	26	GND
27	BCLK-	28	BCLK+
29	BDO3-	30	BDO3+

#### INVERT1: LVDS Backlight connector



The Motherboard provides a 6 pin INVERT for driving the LVDS LCD backlight panel.

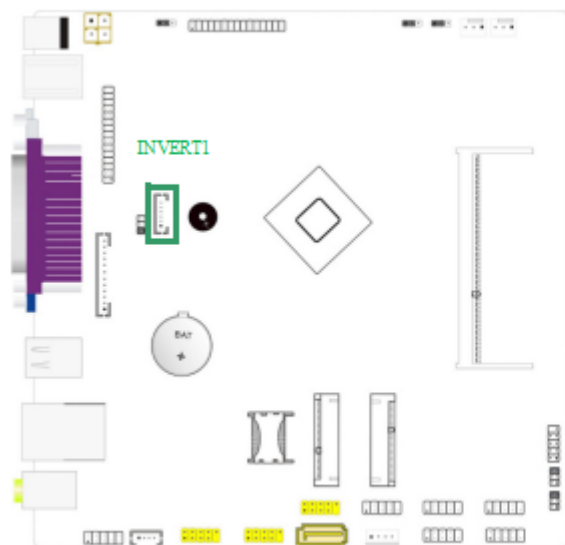

Pin	Definition
1	+12V
2	+12V
3	ENABLE
4	PWM
5	GND
6	GND

### LVDS\_PWR1: LVDS LCD logic circuit voltage select jumper


The Jumper Cap is used to select the voltage of the LVDS LCD logic circuit.

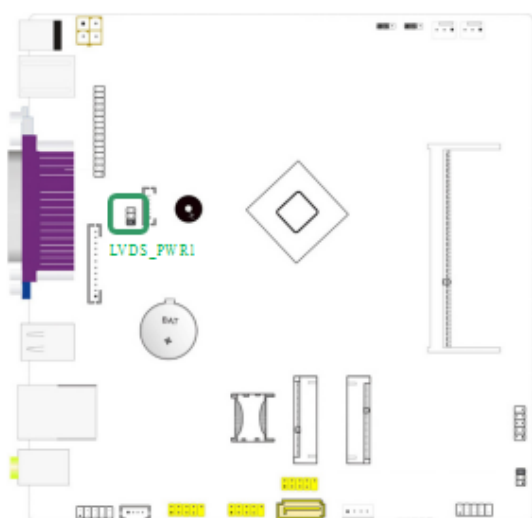

Pin	Definition
1-2	LVDS 3.3V
3-4	LVDS 5V
5-6	LVDS 12V

### VGA\_H1: VGA Internal pin

The Pin and VGA(Video Graphics Array) of I/O port is the same display channel and only supports the dual-VGA synchronous display.

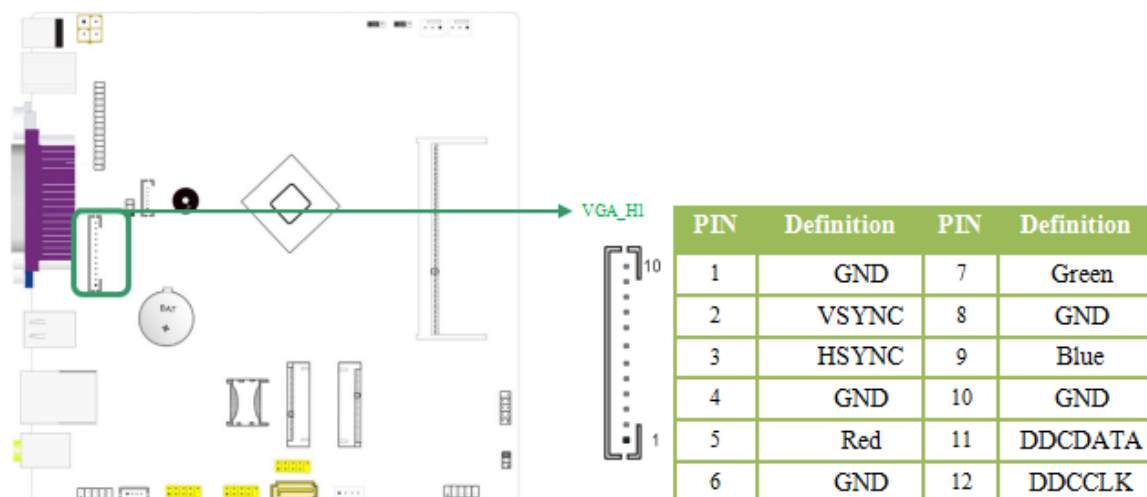


### Dual display settings

The board provides a standard VGA interface (VGA built a pin), a dual-channel 24bit LVDS interface, various combinations of dual-screen display and dual display functions are given below:

Combination mode	Double display function
VGA1 +LVDS	Supports synchronous/asynchronous dual display
VGA_H1+ LVDS	Supports synchronous/asynchronous dual display

### 5.5.2 Definition of Common Function Port Pin

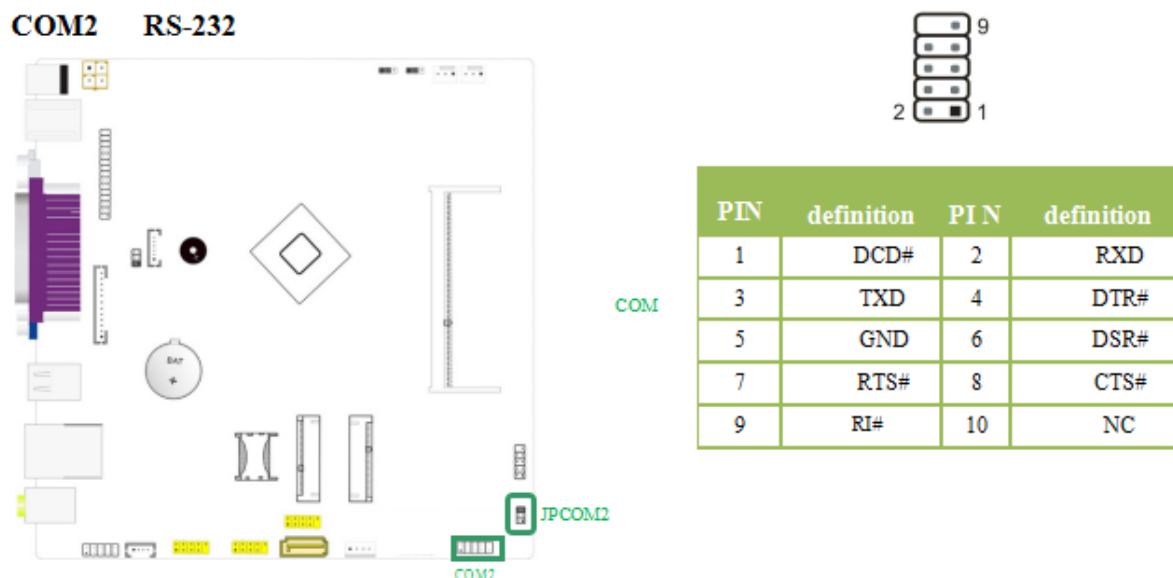




## 5V/12V power supply (COM2)



Pin	definition
1-2	RI
3-4	+5V
5-6	+12V


The above COM does not support RI wake up.

## F\_USB1, F\_USB2 , F\_USB3 (2.0) Extension Pin




PIN	definition	PIN	definition
1	+5V	2	+5V
3	USB1_Data-	4	USB2_Data-
5	USB1_Data+	6	USB2_Data+
7	GND	8	GND
9		10	GND_CHASSIS



The audio extension cable can be extended to audio input and output ports.

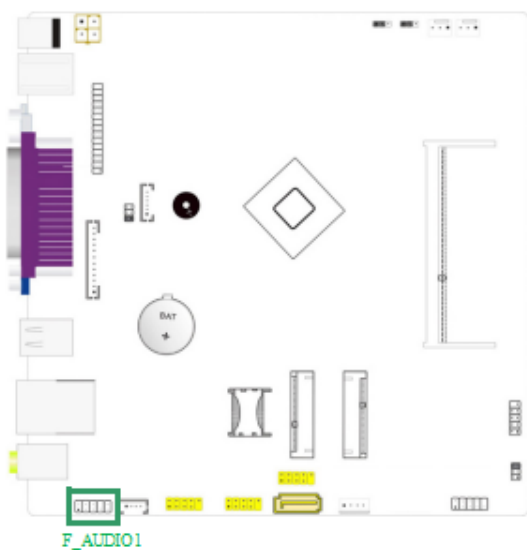

PIN	definition	PIN	definition
1	MIC-L	2	GND
3	MIC-R	4	PRESENCE
5	LINEOUT-R	6	MIC SENSE
7	SENSE_SEND	8	
9	LINEOUT-L	10	LINEOUT SENSE



### JAMP1 Digital audio output connector (optional)

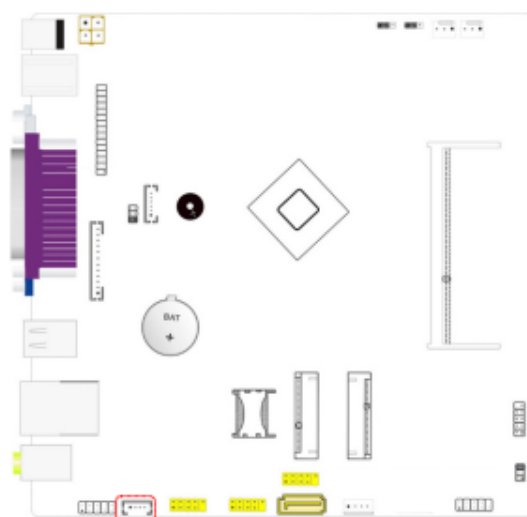

JAMP1

PIN	definition
1	AMP_R-
2	AMP_R+
3	AMP_L+
4	AMP_L-

### 5.5.3 Other Pin Definitions: F\_PANEL1, CLR\_CMOS, AT\_SEL

#### F\_PANEL1: Front panel pin

The 10-Pin function includes power-on, reset, hard disk indicator, power indicator, allowing the user to connect the system's front panel switch.




PIN	definition	PIN	definition
1	HDD_LED+	2	PWR_LED+
3	HDD_LED-	4	GND
5	RESET GND	6	PWR_ON GND
7	RESET	8	PWR_ON
9	GND	10	NULL



### CLR\_CMOS1: Wipe the COMS, setup jumper

It allows the user to shorten the Pin2-3 of the jumper to restore the BIOS initial security settings. Follow the instructions carefully to avoid damaging the Motherboard.



Pin	definition
1-2	Normal ( default )
2-3	Clear CMOS

Clear the COMS data:


- ① Disconnect the power supply
- ② Set the jumper to "Pin 2-3 closed"
- ③ Wait for 5 seconds
- ④ Then set the jumper to "Pin 1-2 closed"

- ⑤ Power on to reset the password or clear the CMOS data

### 5.5.4 Slots and connectors: MSATA1, SATA, 3G/WIFI, SATA\_PWR


#### MSATA: mSATA Slot

The slot supports the mSATA SSD installation.

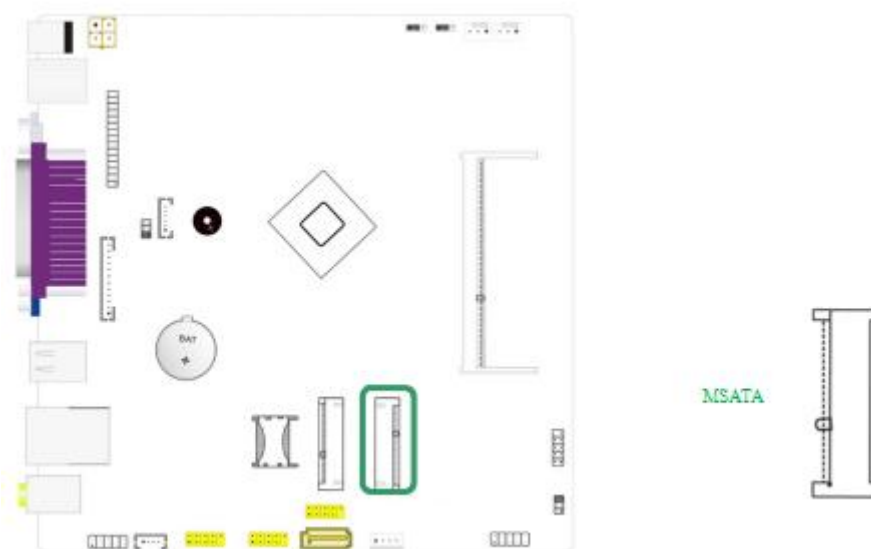


While installing the SSD, please be careful while using the tightening screw.

#### 3G/WI-FI

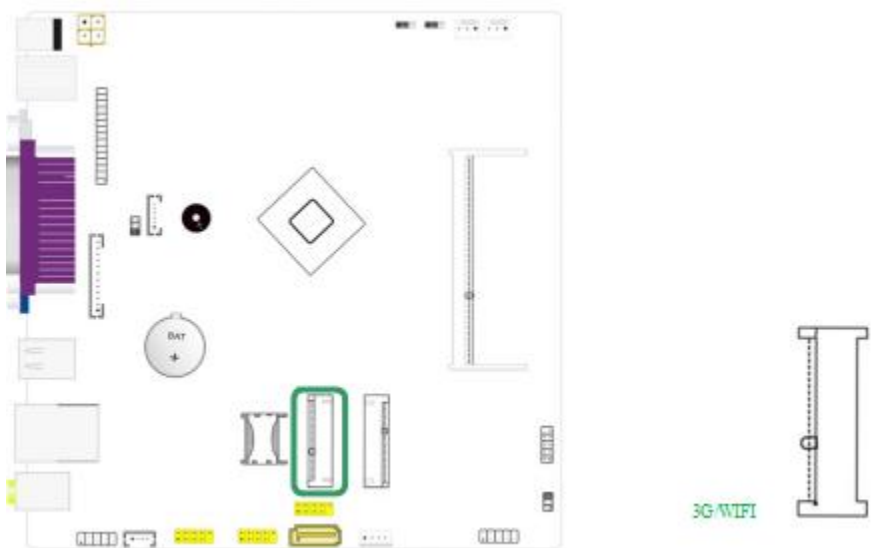


#### SATA1: 1×SATA 2.0 Interface

SATA\_PWR1,SATA2.0 (yellow) supports 3GB/s transfer rate.

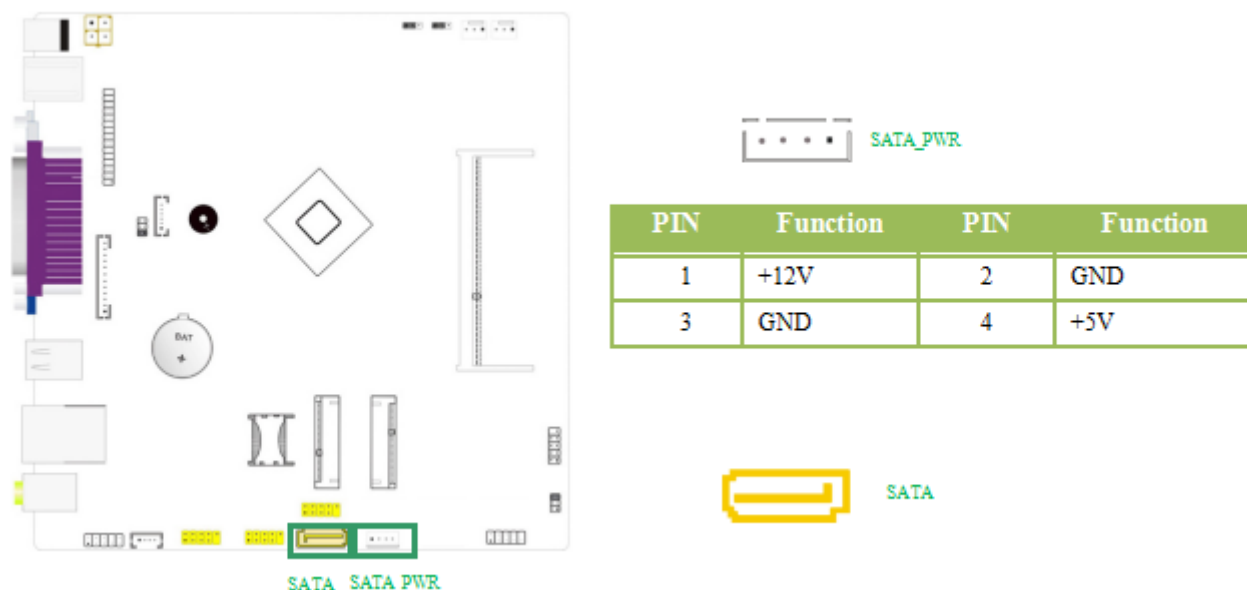

### Set Jumper

The following figure shows the jumper set up procedure. When the jumper cap is placed on the pin, the jumper will be "Closed", indicating that the two pins are connected; otherwise, "Open".

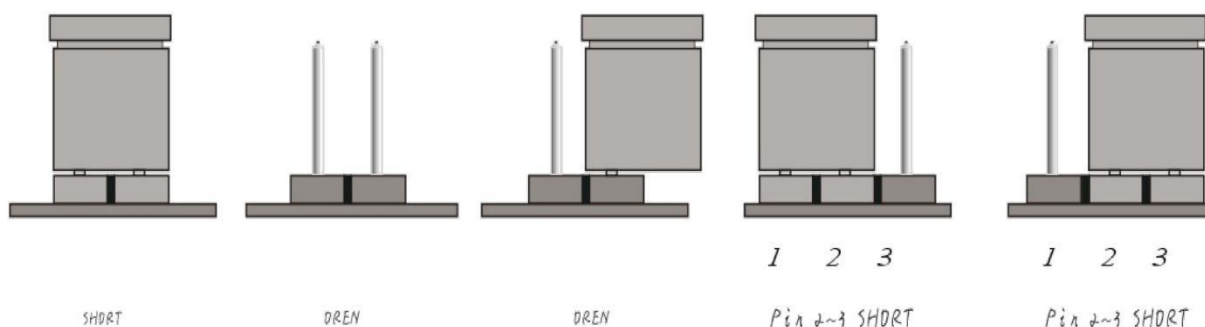

## 6 BIOS Settings

### Introduction

The purpose of this section is to introduce the functions of the Motherboard AMI BIOS setup menu. The BIOS program allows the user to modify and save the basic system configuration. The BIOS setup options and modified data are stored in the CMOS RAM and the CMOS RAM power supply is provided by a lithium battery on the Motherboard. To ensure that the modified value saved in CMOS RAM is not lost, make sure that the power is cut off.

Under normal circumstances, the factory default BIOS is an optimized value, and no modification is required. However, if any other problem causes BIOS data loss, it is required to re-set the BIOS.

In case you do not understand the BIOS options and settings, please do not arbitrarily modify them. In case any problem occurs, it can be because of the error in BIOS value; to resolve it please restore the BIOS factory settings.

This manual provides the basic instructions that allows the user to refer and optimize the BIOS function settings, but there are still some BIOS projects that are not described. Please keep the default settings without having to fully understand their functions.

## BIOS Setting

The following contents of this manual will instruct you to set the basic functions of the BIOS program.

When the computer is started, the BIOS enters the POST program. The self-test program is a series of diagnostic programs that are fixed in the BIOS. When the self-test program is executed, if any error occurs, it will display the following information:

## Press Delete to BIOS

If you want to enter the BIOS setup program, press <Delete>. If this message disappears before you respond, you can turn off or press the Reset button or Restart your system. You can also press <Ctrl + Alt + Delete> to restart the system.

In the BIOS setup, you will see a description of the options in the upper right corner, which is a brief description of the selected items. The detailed description of Function keys will be in the lower right corner; you can use these keys to change the settings.

## BIOS Function keys

BIOS Function keys	Description
→←	Select screen
↑↓	Select item
ENTER	Select the item and enter the submenu
+/-	Changes the value, add or subtract values
F1	Displays the help content
F2	Previous setting values
F3	Optimized Default value
F4	Save changes and Exit
ESC	Exit

## BIOS Upgrade

- 1) Please download from the official website or get the latest BIOS file and refresh the tool from the supplier.
- 2) Let the system run in UEFI Shell mode; the AMI BIOS refresh tool is provided by us is FPT64.efi.
- 3) Run the application to back up the BIOS file. The instruction is FPT64.efi / D backup.BIN.
- 4) Update the BIOS. The instruction is FPT64.efi / F NEWBIOS.BIN.

- 5) Restart the system, press "Delete" to set the BIOS, press "F3" to select "Load Optimized default" and press "F4" to save the changes and exit.

The default BIOS settings are suitable for most of the situations, ensuring optimal motherboard performance. If the system becomes unstable when you change the settings, load the default settings to ensure system compatibility and stability.


For a system performance, the Motherboard's BIOS firmware will be constantly updated.

The BIOS information described here is just for your reference, and the actual BIOS information and its settings may differ slightly from the manual.

**The contents of this manual are subject to change without notice.**

## 6.1 MAIN MENU

Once you have entered the AMI BIOS setup menu, the main menu appears on the screen and displays an overview of the basic system information. Select the menu you want to change, press the "↑ ↓ ← →" buttons to move the navigation bar to the menu you want to change and press the <Enter> button. When you move the navigation bar to each menu, the top right of the screen will display the Help information to help you better understand the functionality of this menu. When a menu is selected, the submenu of the item is displayed and the user can adjust the corresponding configuration parameters.

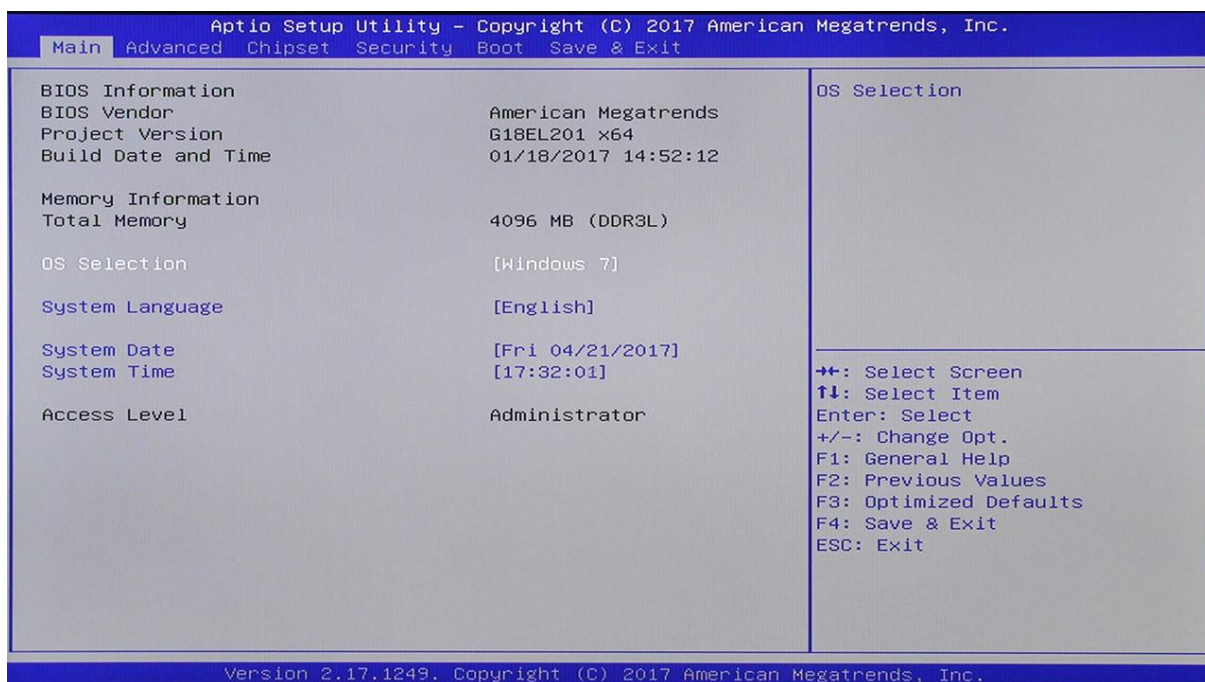

### BIOS Information

Displays BIOS system information, including BIOS version, creation date, etc.

### OS Selection

Displays the OS selection such as Windows 7, Windows 8.X, etc.

## System Date

Allows to set the current date of the system; the display format is "Week \* Month / Day / Year".

## System Time


Allows to set the current time of the system; the display format is "Hours: Minutes: Seconds".

## 6.2 ADVANCED MENU

The Advanced menu allows you to set up the CPU, Super I / O, Power settings management, and other system devices.




**If the value in this menu is set incorrectly, it may cause system failure.**

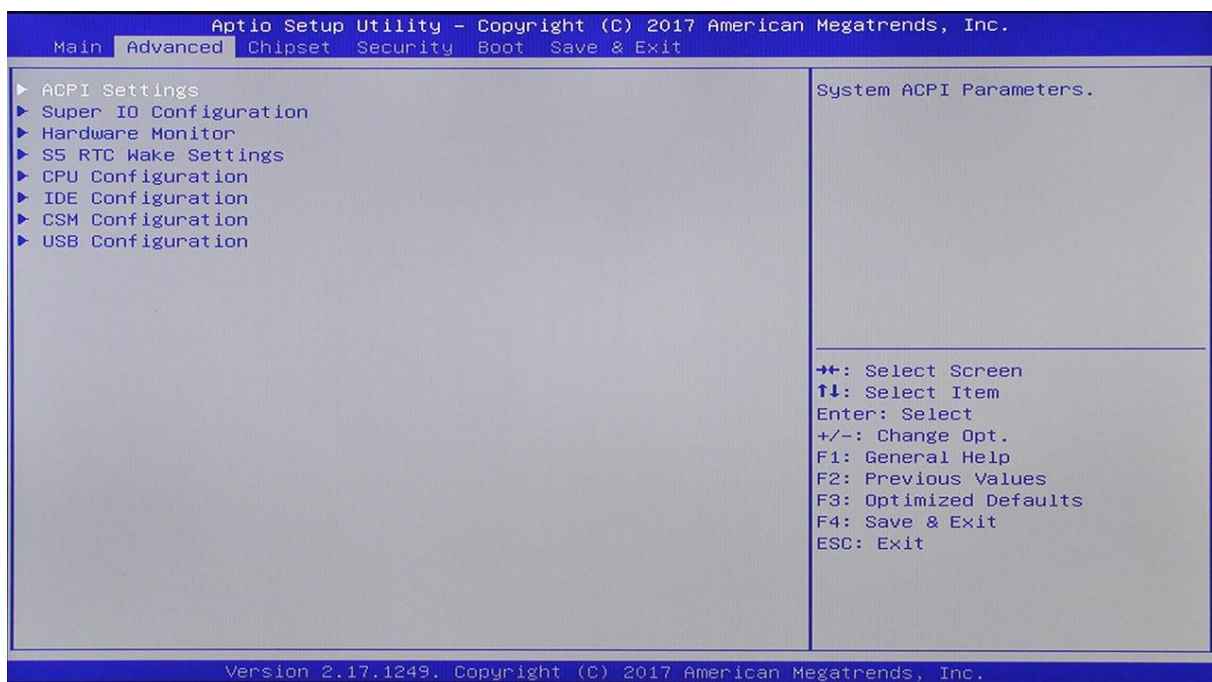

## ACPI Settings

This menu provides the power management information setting (Due to different models of motherboards, some options are different, please choose according to the actual menu).



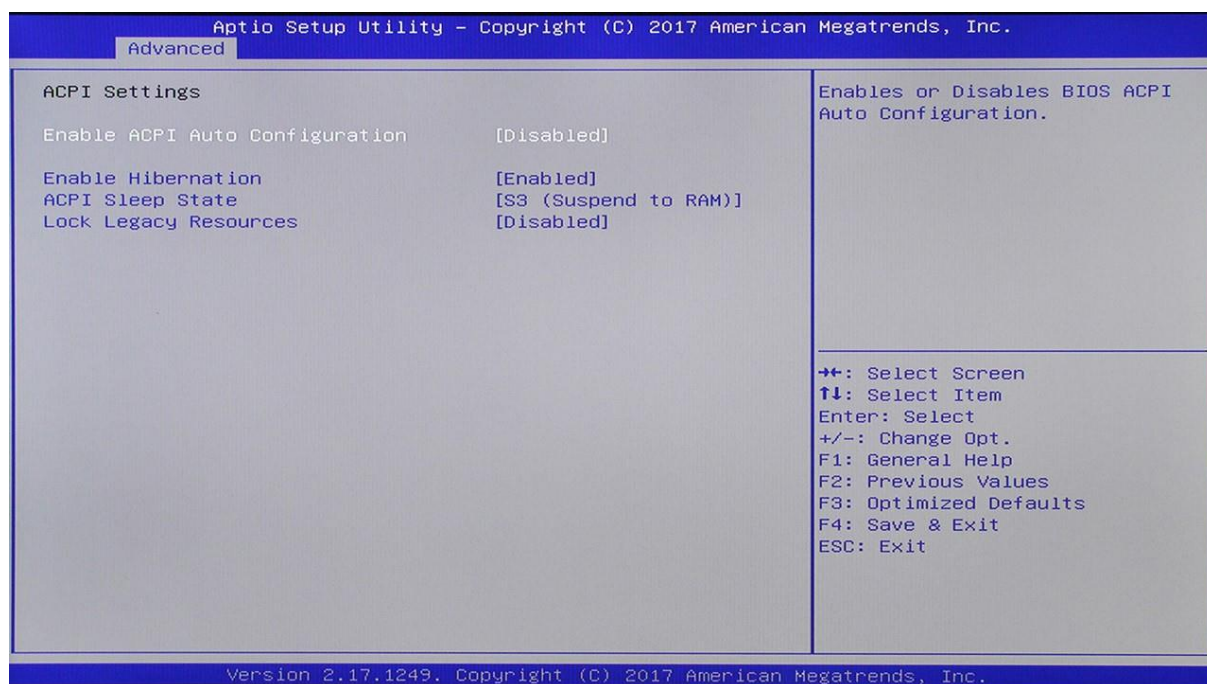


### Enable Hibernation

Allows to set the Enable or Disabled system hibernation, the default is "Enabled".

### ACPI Sleep State

Allows to set the ACPI sleep state, the option is: "Suspend Disabled".

### IT8786E Super IO Configuration

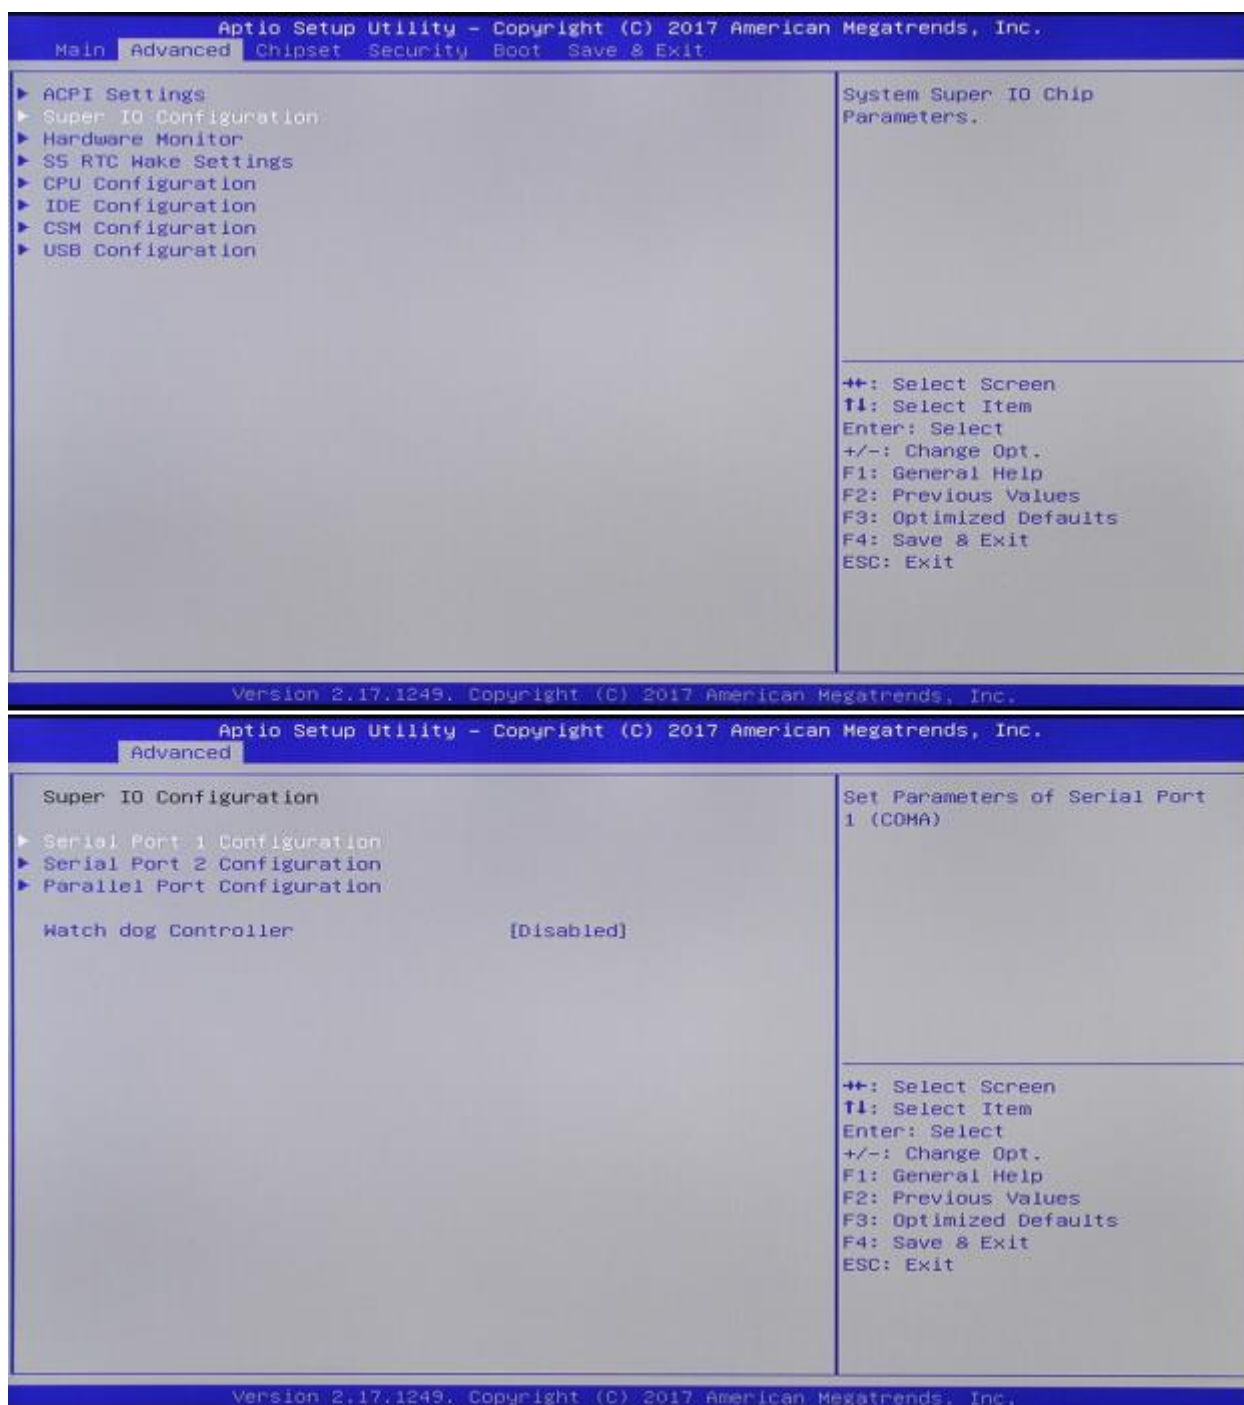

## Watchdog Controller


The options of Watchdog Controller are: Disabled (default), Second, Minute.

## Restore AC Power Loss By IO

The options are Power Off (default), Power On, Last State.

## Serial Port Configuration

Select an address and the corresponding interrupt value to the serial port, enter the settings interface and it will be displayed as shown below:

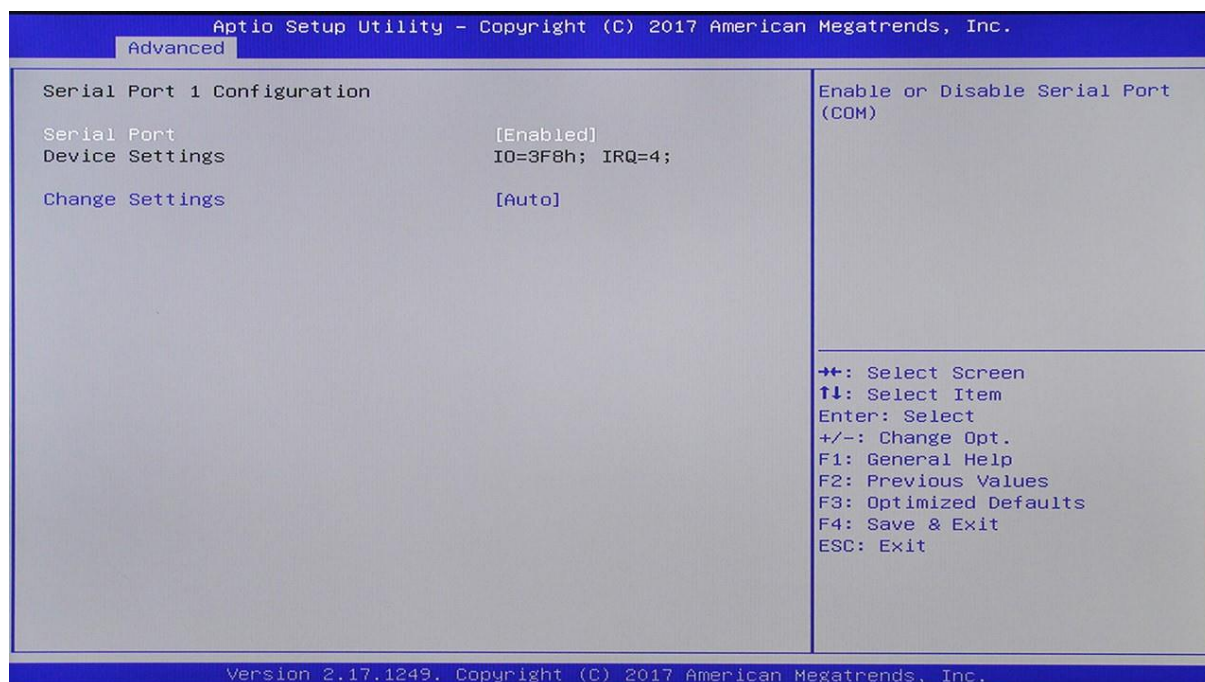

## Serial PortX

Select the serial port, and the available options are [Enabled] and [Disabled].

## Device Settings


Set the serial port interrupt value, the interrupt settings are [IO=3F8h; IRQ=4].

## Change Settings

The menu has six options, the default value is [Auto].

## Parallel Port Configuration

Select an address and the corresponding interrupt to the serial port, open the settings interface and it will be displayed as shown below:

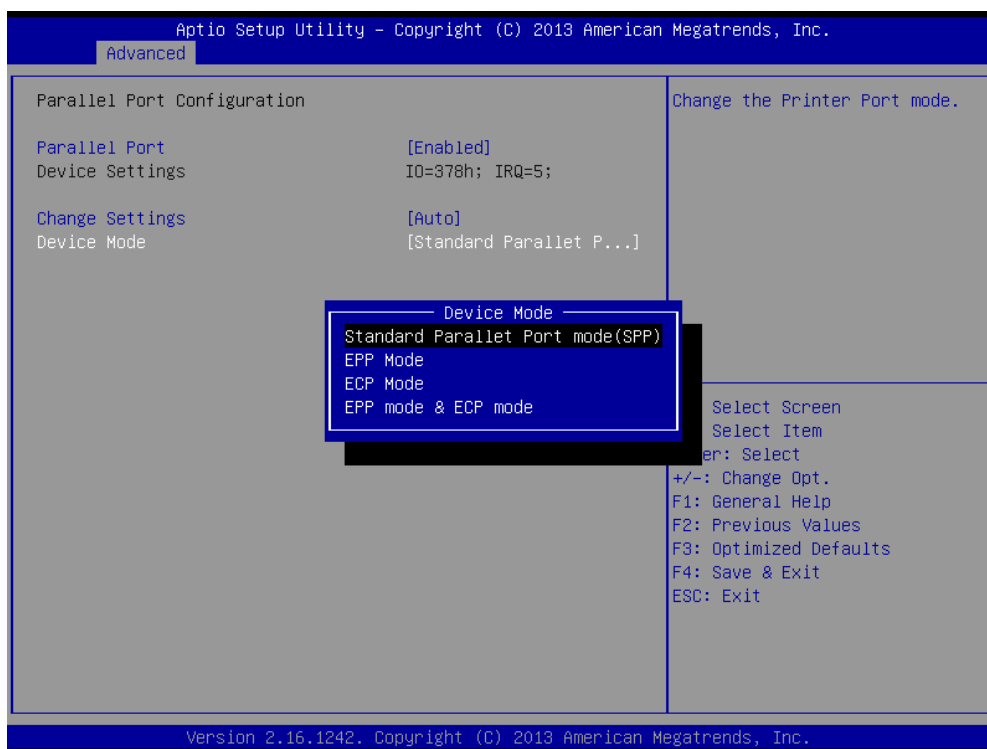

### Parallel Port

Set the parallel port to on or off, the available options are [Enabled] and [Disabled].

### Device Settings

Set the parallel port interrupt [IO=378h; IRQ=6].


### Change Settings

The settings have five options, the default value is [Auto].

### Device Mode


The device modes are EPP Mode, ECP Mode, EPP mode and ECP Mode.

## Hardware Monitor

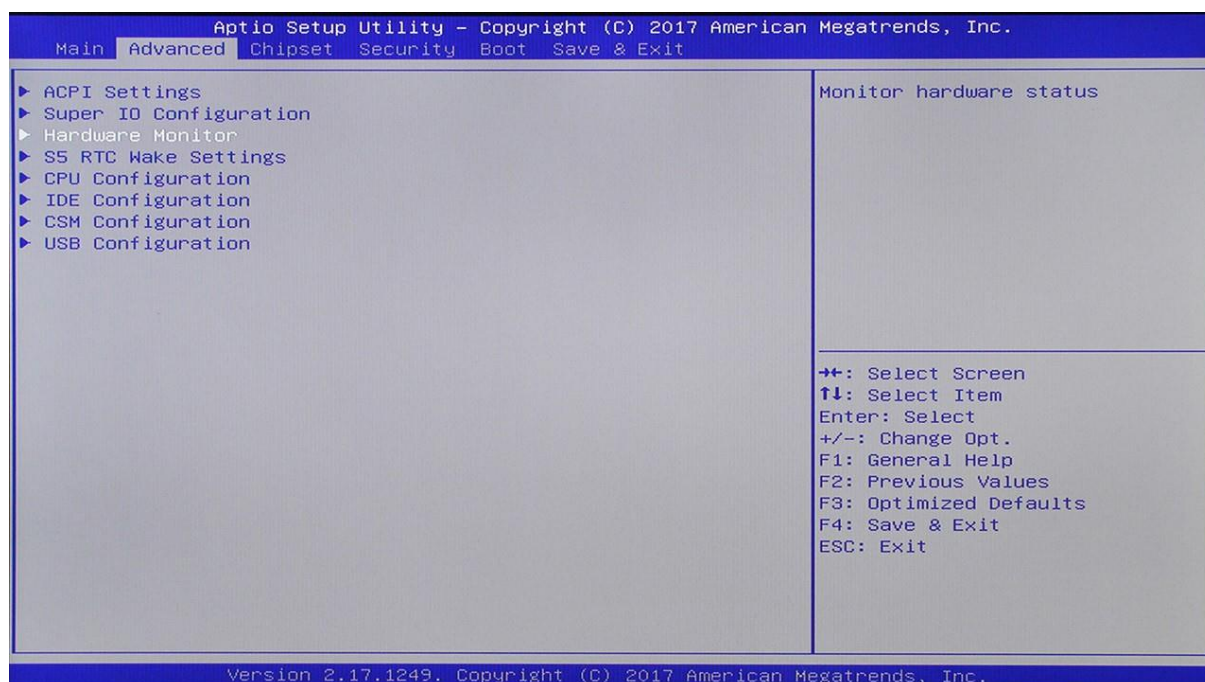

## PC Health Status



The interface displays information about the health status of the PC hardware, including CPU temperature, System temperature, CPU fan speed, System fan speed, Voltage, etc.

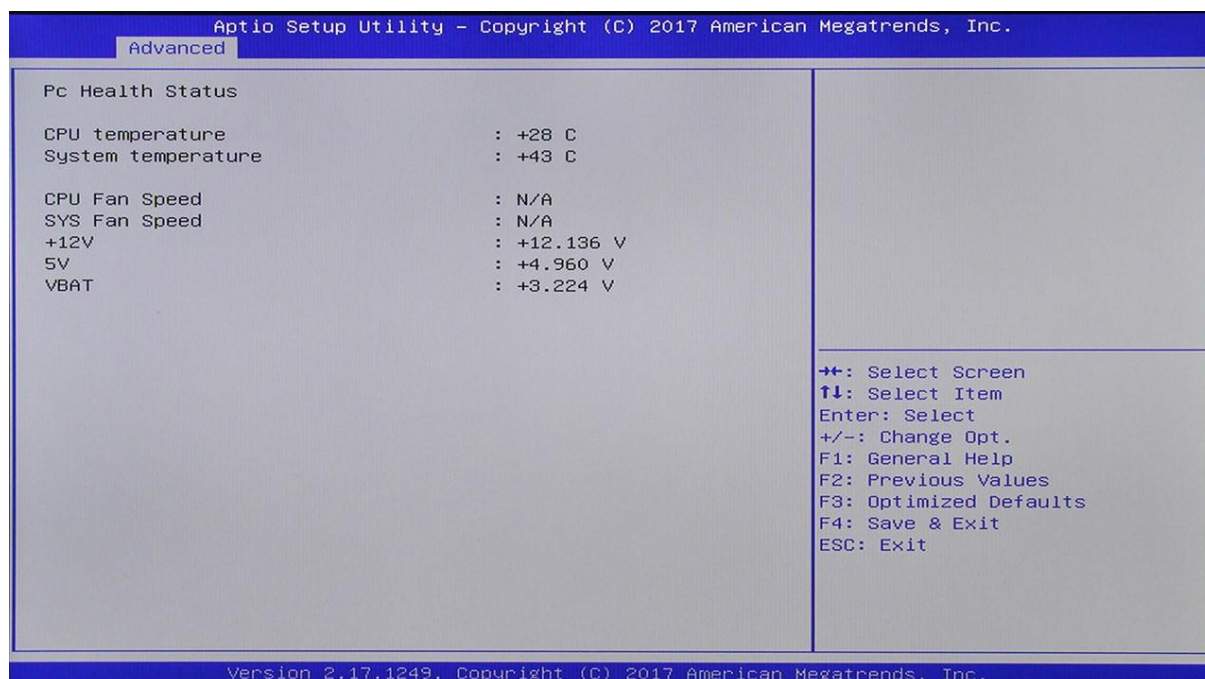

## Advanced S5 RTC Wake Settings


Here you can set the timer switch, and the setting options are: Disabled (default), Enabled. When set to Enabled, you need to set the fixed boot time, format: Day (D): Hour (H): minute (M): Second (S)



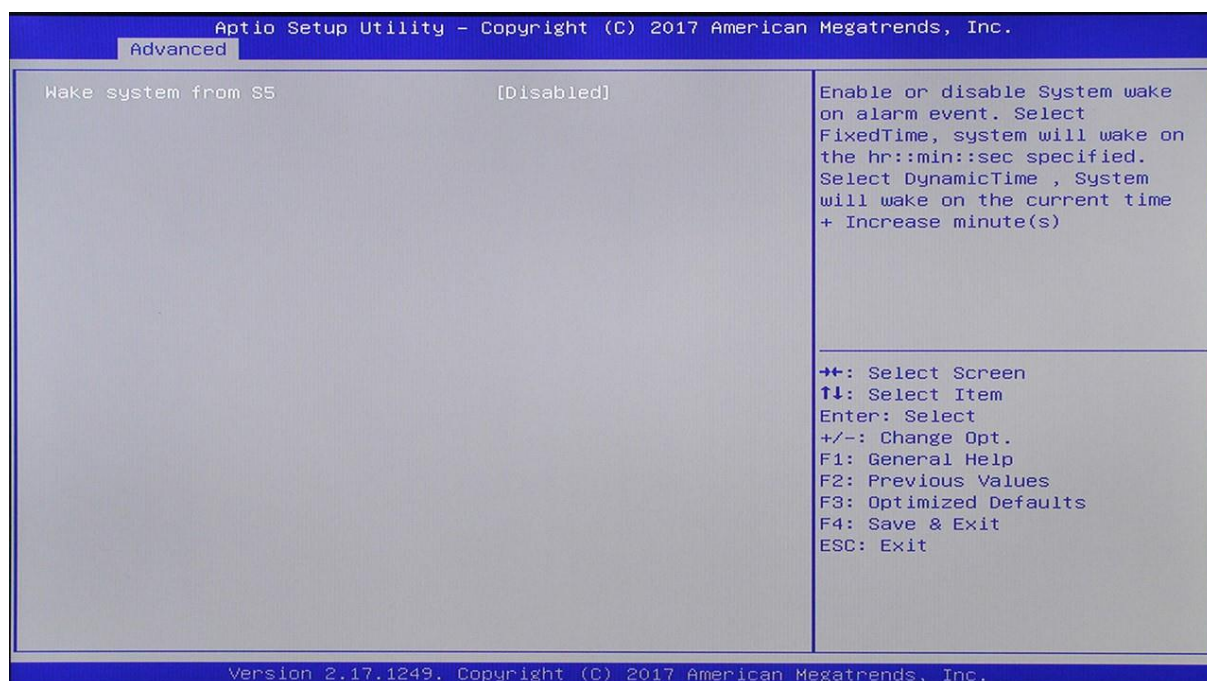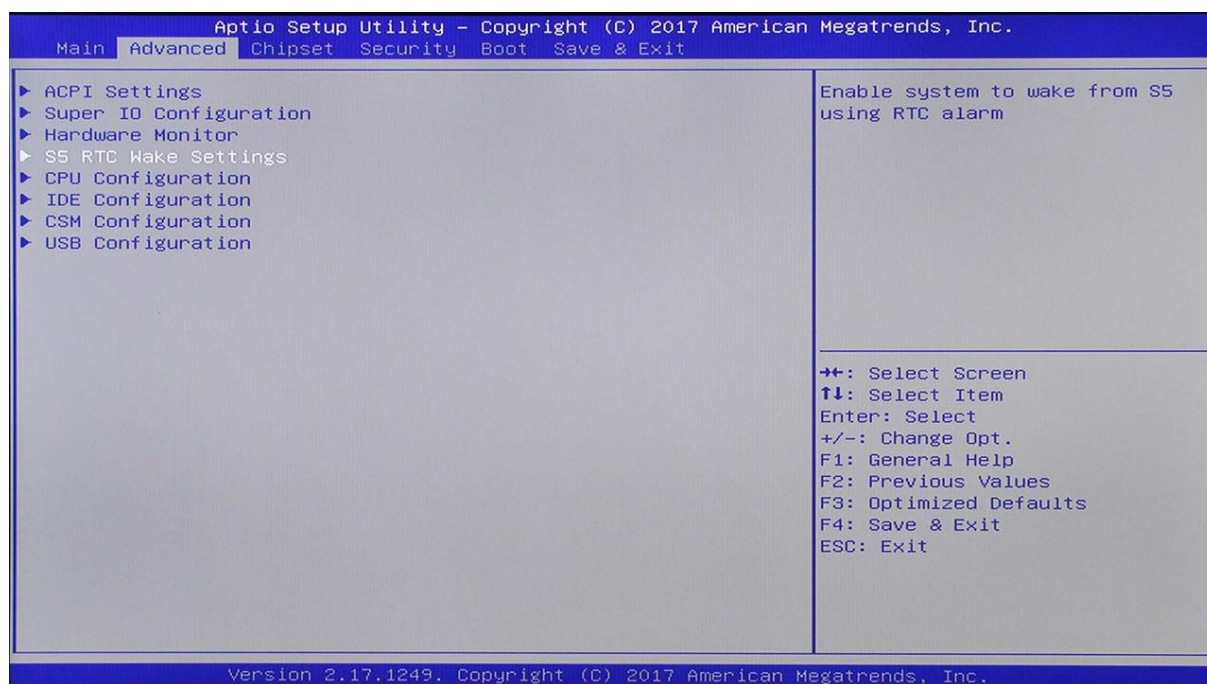

## CPU Information

This displays the information that the BIOS automatically detects.

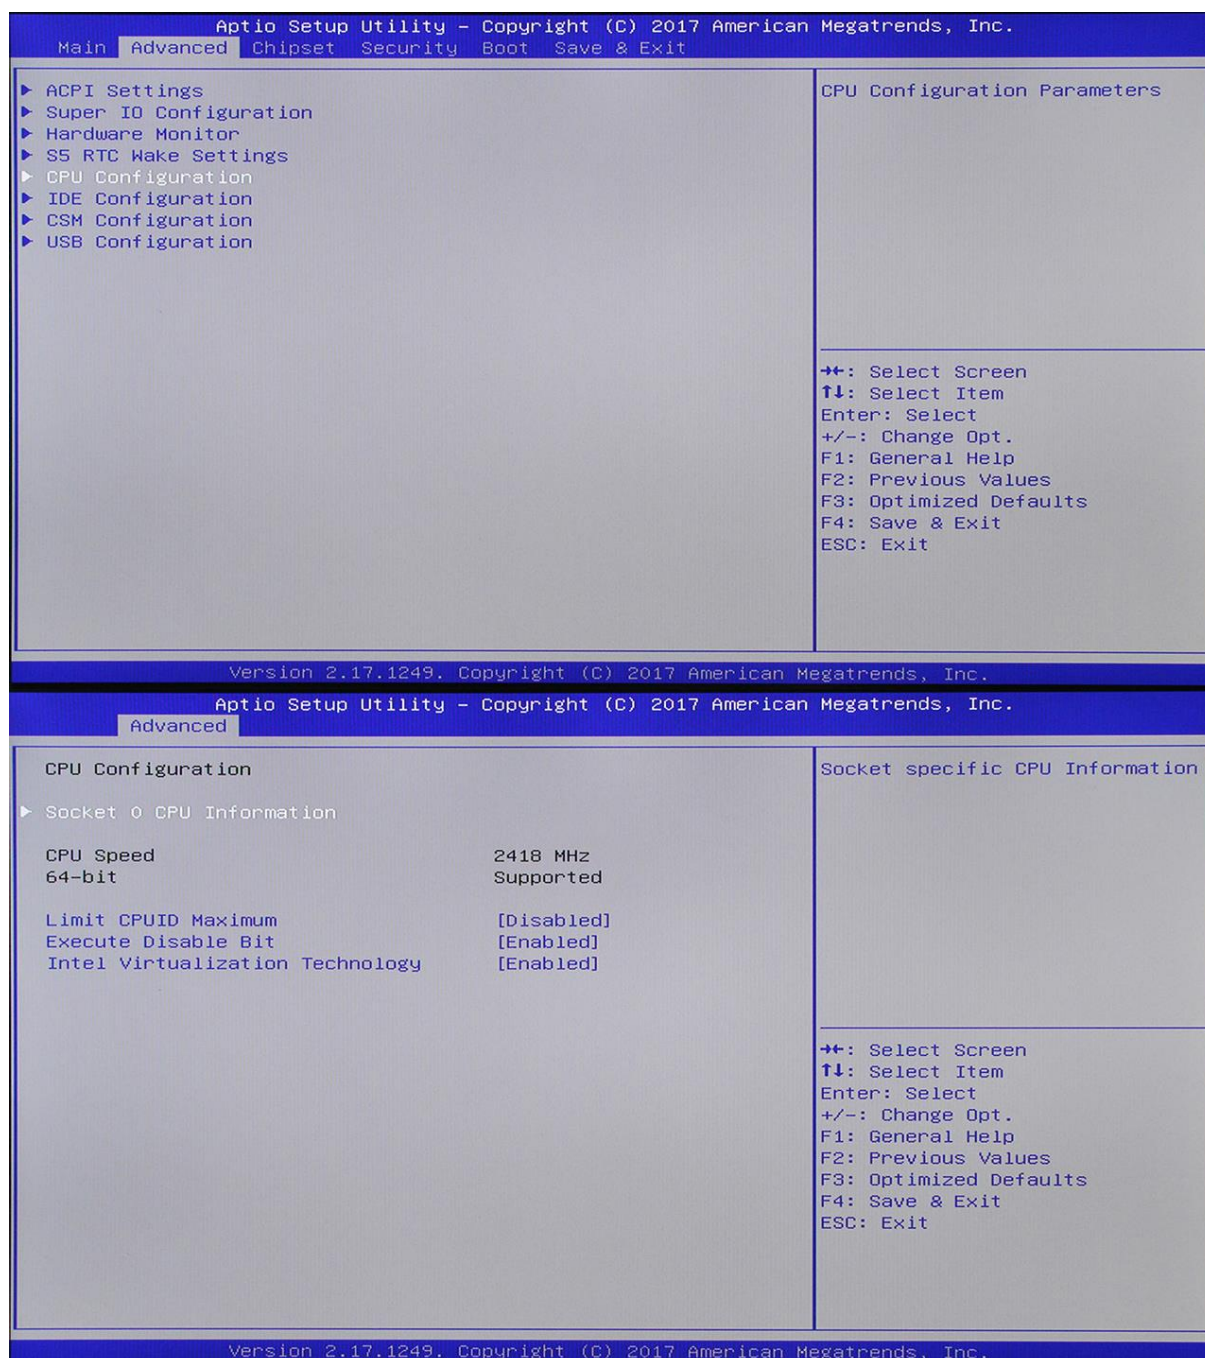

### Socket 0 CPU Information

Displays the detailed CPU information.

### Active Processor Cores [ALL]

Activates the number of processor cores with options ALL, and 1.

### Limit CPUID Maximum [Disabled]

Please set this option to [Enabled] when you want to use an operating system that does not support the extended CPUID function.

### Execute Disable Bit [Enabled]

This option is used to enable or disable the “No-Execution Page Protection technology”. When set to [Enabled], the XD function is always forced to 0. The setting options are: [Disabled] and [Enabled].

### Hardware Prefetcher [Enabled]

This option allows you to use or not use the hardware prefetcher function. The setting options are: [Disabled] and [Enabled].


### Adjacent Cache Line Prefetch [Enabled]

This option allows you to use or not use the prefetcher adjacent cache data mode. When set to [Disabled], only one 64-bit line is pre-read from the 128-bit segment (contains the requested data). When set to [enabled], both lines will be prefetched, regardless of whether they have the requested data. The setting options are: [Disabled] and [Enabled].

### Intel Virtualization Technology [Disabled]


The Intel Virtualization Technology setting options are [Disabled] and [Enabled].

### Thermal Configuration

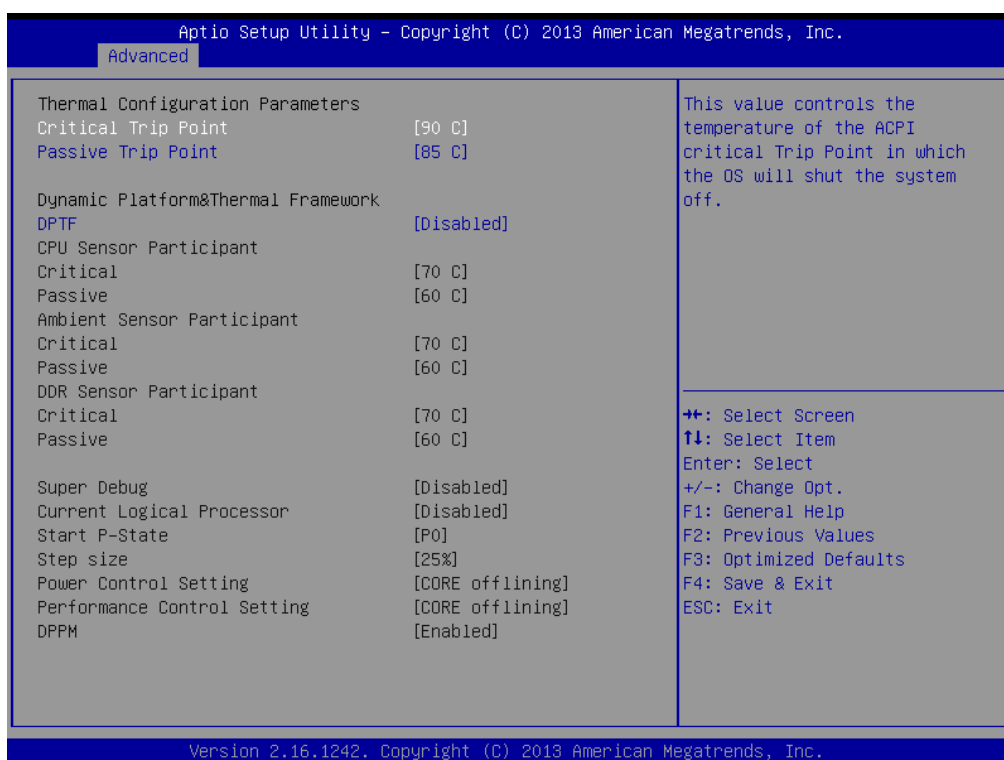




## IDE Configuration

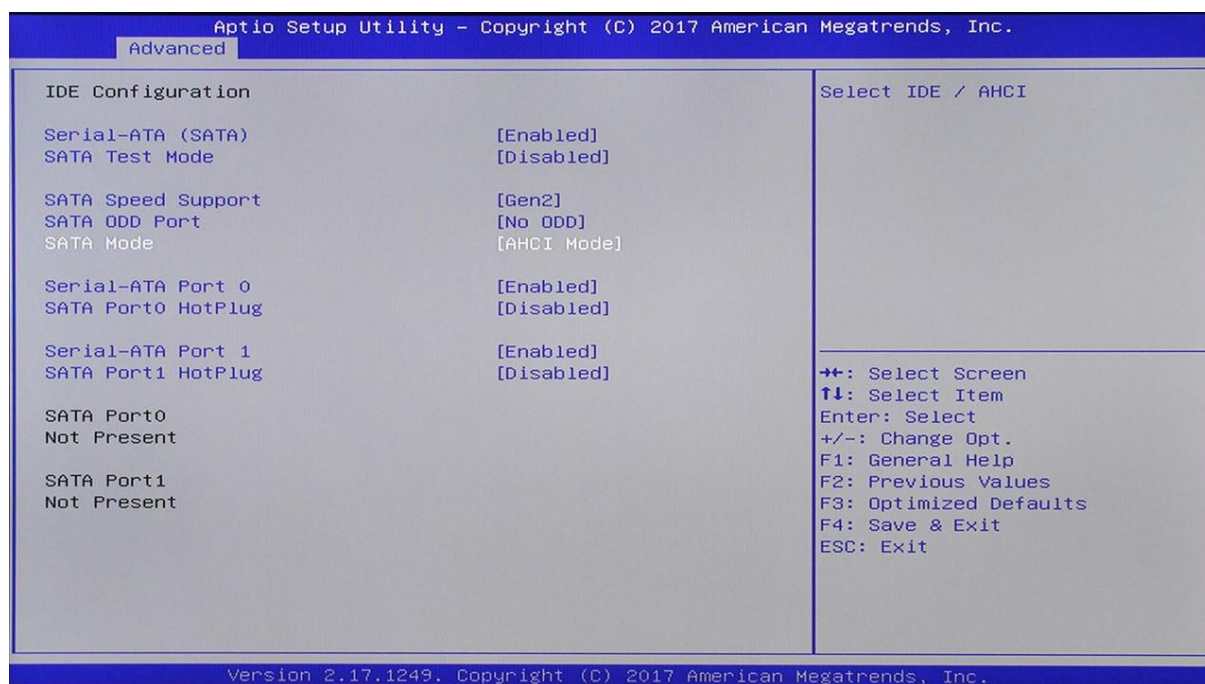


## CSM Configuration

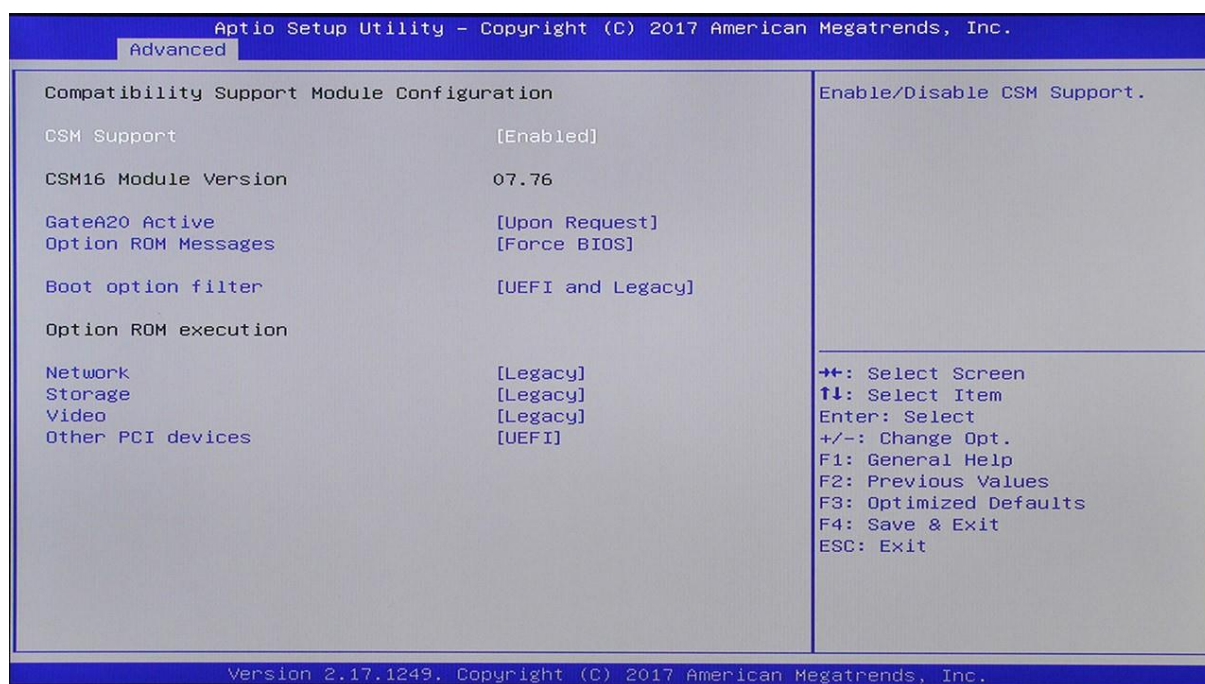

## USB Configuration

The auto-detected values or devices are displayed in the USB Devices project. If no device is connected, it displays "None".

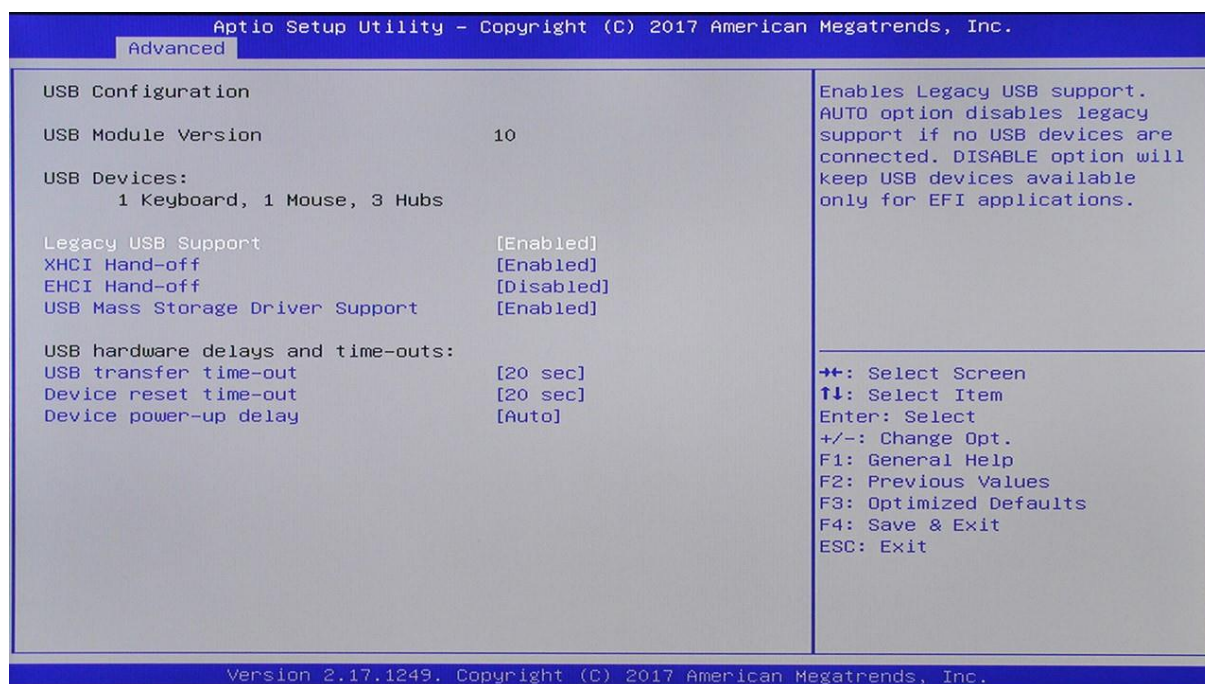

### Legacy USB Support [Enabled]

This menu is used to enable or disable the USB device. When set to the default value [Auto], the system can automatically detect whether a USB device exists or not, if yes, then it starts the USB controller; otherwise, it will not start. However, if you set this item to [Disabled], the USB controller in the system is turned off regardless of the presence or absence of the USB device. The setting options are: [Disabled], [Enabled] and

[Auto]

### XHCI HAND-OFF [Enabled]

This menu and EHCI HAND-OFF, are used to select whether EFI releases control of the USB controller before the OS loads the USB driver. If you select Enabled, EFI closes XHCI (USB2.0) when entering the OS.

### EHCI Hand-off [Disabled]

This menu is used to start an operating system that does not support the EHCI hand-off function. The setting options are [Disabled] and [Enabled]. If you select Enabled, EFI closes EHCI (USB2.0) when entering the OS.

### USB Mass Storage Driver Support [Enabled]

The USB Mass Storage Driver setting options are [Disabled] and [Enabled].


### USB Transfer time-out [20sec]

This menu sets the maximum time for a data transfer on the USB2.0. If the transmission is not completed within this time, the error is given to the EFI. This setting only works on EFI and does not affect the USB drive on the OS.


### Device reset time-out [20sec]

This menu sets the maximum time required for the storage device reset on the USB2.0. During the time, EFI checks whether the storage device can accept the instructions. If the timeout occurs, the storage device is considered to be faulty.

## 6.3 Chipset MENU

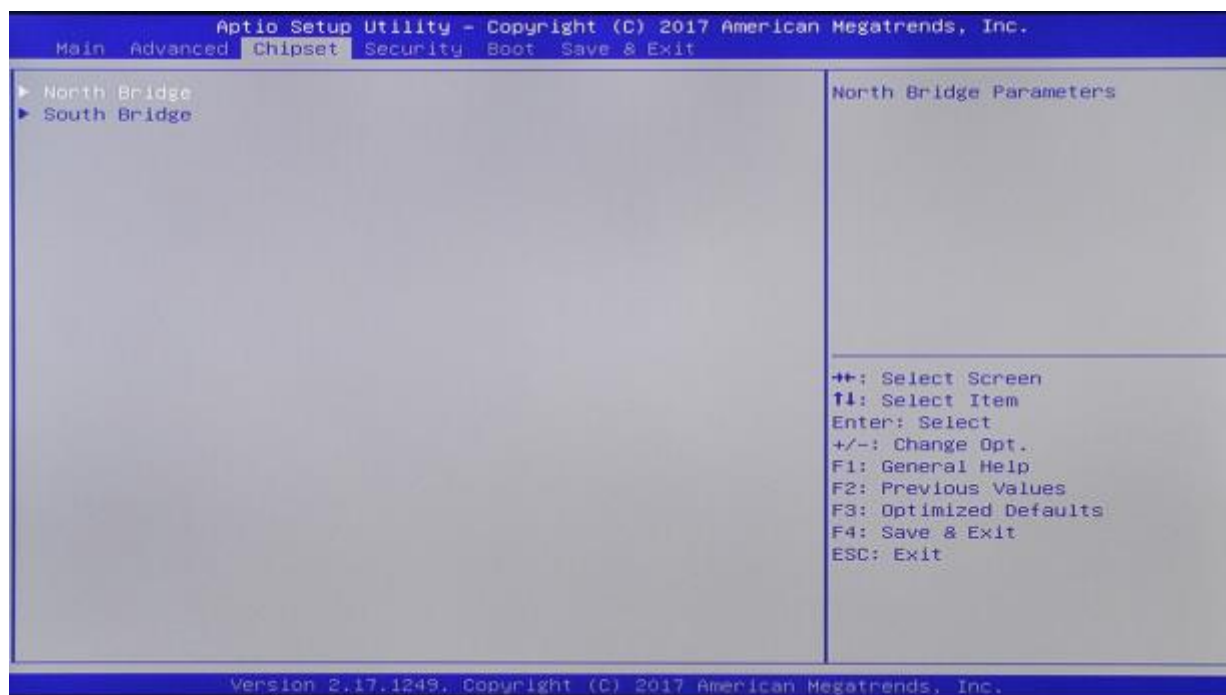


### North Bridge

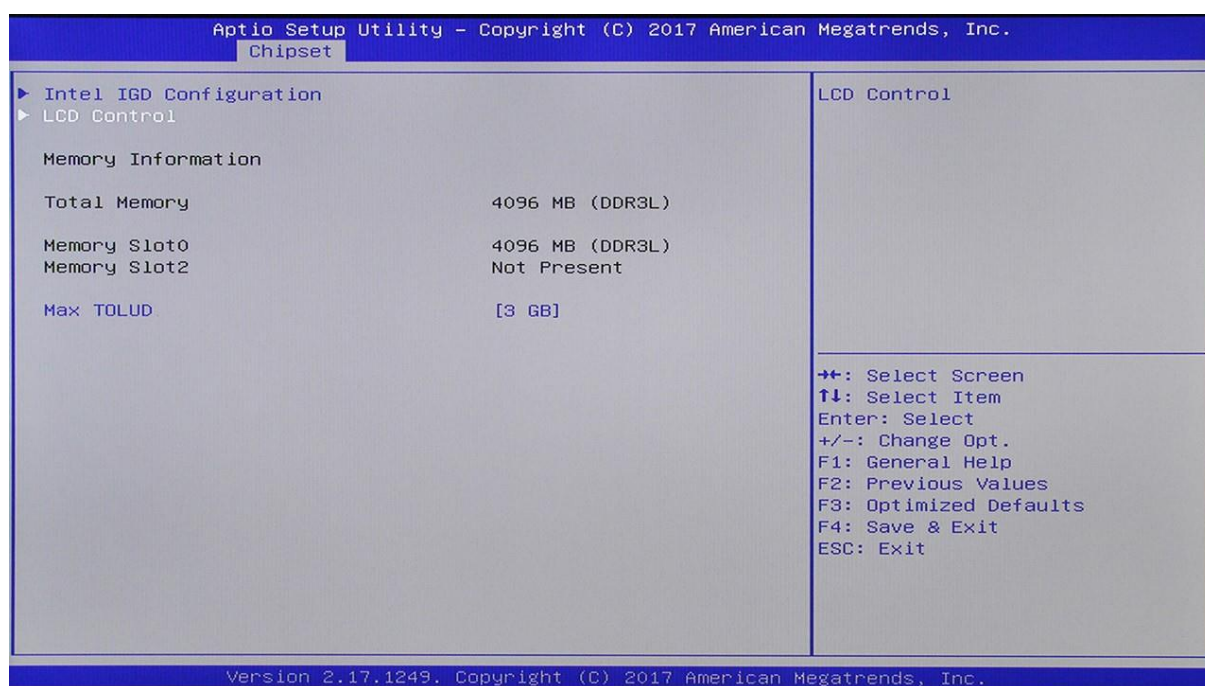



## Intel ICD Configuration

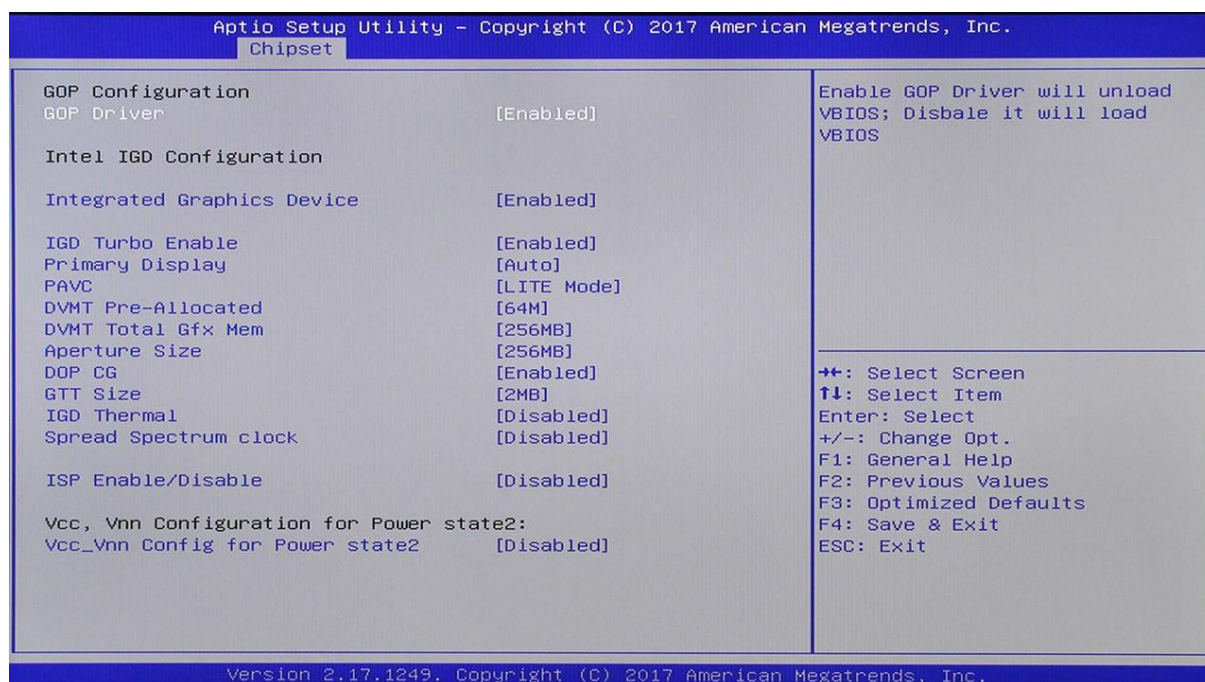

### GOP Driver

The GOP Driver options are Enabled (default) and Disabled.

### Integrated Graphics Device

The Integrated Graphics Device options are Enabled (default) and Disabled.

### Primary Display

The Primary Display options are Auto, IGD (default), PCI, SG.

### PAVC

The PAVC setting options are [SERPENT Mode] and [LITE Mode].


### DVMT Pre-Allocate

Set the DVMT Pre-Allocate value, the default value is 64MB.

### DVMT Total Gfx Mem

Set the DVMT Total Gfx Mem value, the default value is 256MB.

## LCD Control

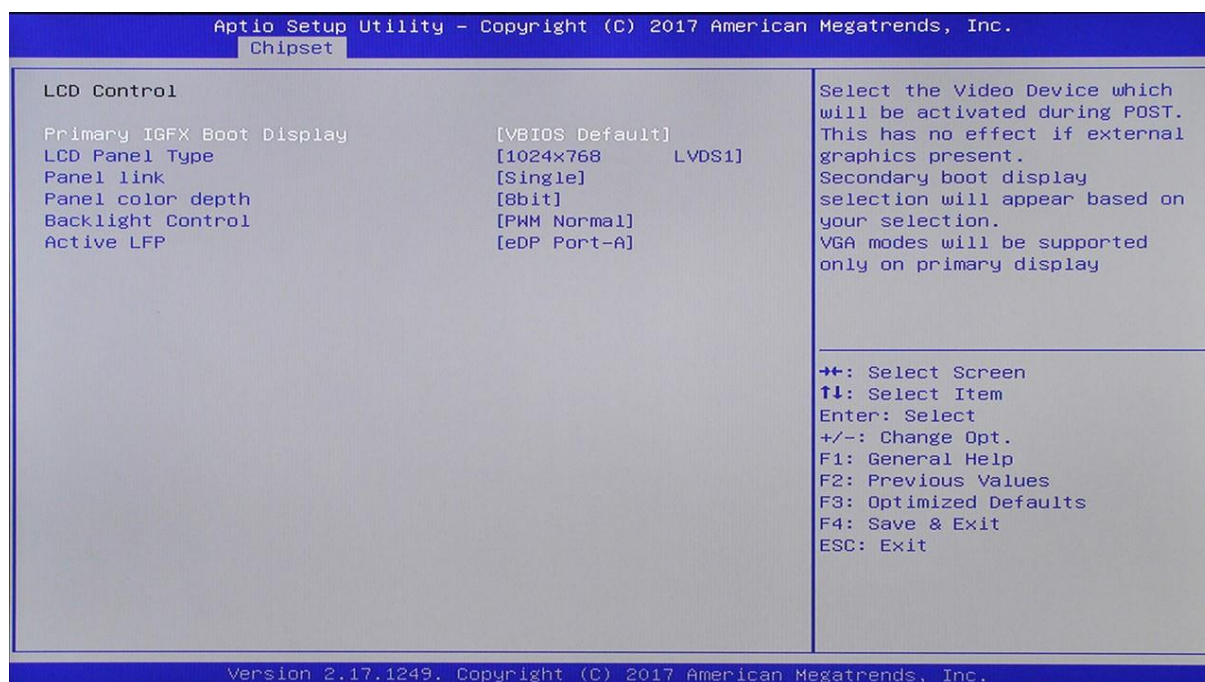

### Primary IGFX Boot Display

The Primary Display setting options are Auto (default), VGA&VGA\_H1, VGA\_H2, LVDS.

### LCD Panel Type

#### Panel link

Set the resolution of LVDS, the default is Single 8 1024X768

#### Panel color depth

Set the resolution of LVDS, the default is Single 8 1024X768

#### Panel link

Set the resolution of LVDS, the default is Single 8 1024X768


#### Back light control

Set the resolution of LVDS, the default is Single 8 1024X768

#### Active LFP

Set the resolution of LVDS, the default is Single 8 1024X768

## South Bridge

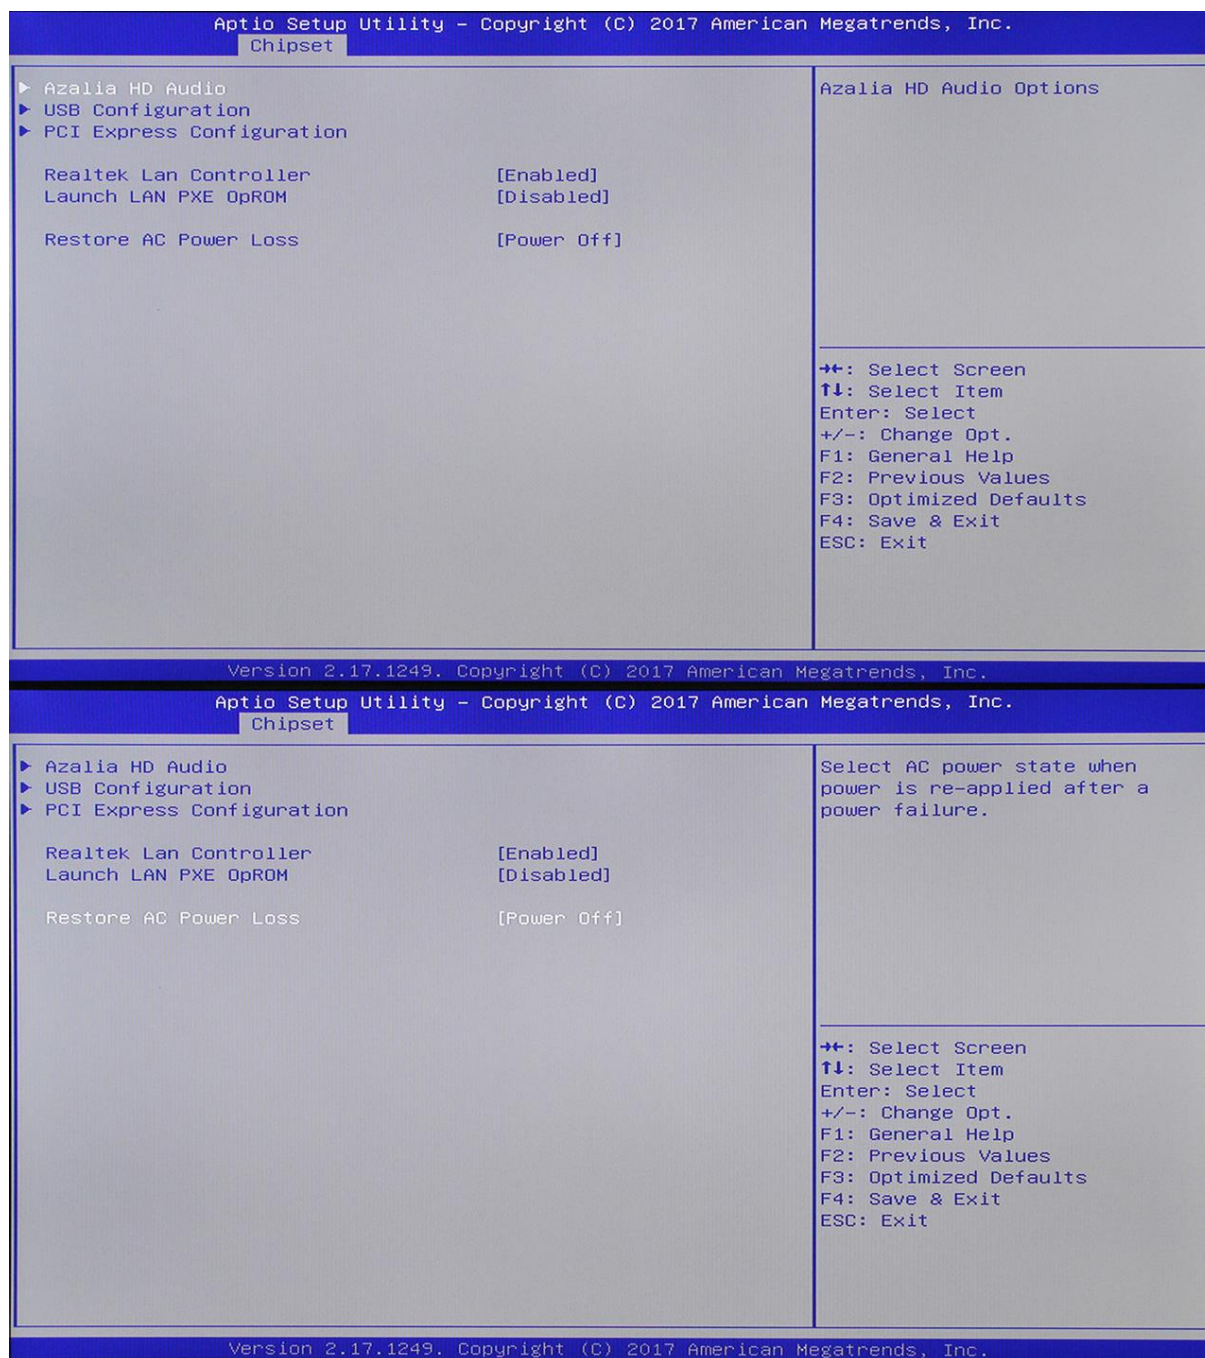

### Azalia HD Audio

#### Azalia HDMI codec Port [Enabled]

Here you can turn On/Off the HDMI Port audio output.

#### USB Configuration

You can set the USB port to On/Off.

#### PCI Express Configuration



### LAN Controller [Enabled]

This menu is used to turn On or Off the LAN controller, the default is On.

### LAN PXE OpROM Boot [Do not launch]

This menu is used to turn On or Off the LAN PXE OpROM Boot, and the setting options are [Do not launch] [UEFI only].

### [Legacy only]

### Restore AC Power Loss [Power Off]


The Restore AC Power Loss options are [Power Off], [Power On], and [Last State].

When set to [Power Off], plug the power and press the power switch to boot.

When set to [Power On], plug the power, regardless of whether the power switch is pressed or not, the host will boot up directly.

When set to [Last State], plug the power, it will be restored to the previous state before the system is powered off, if the system works on when the power off, it will automatically boot, if it shut down before the state, it will be still on the shutdown status.

## 6.4 Security MENU

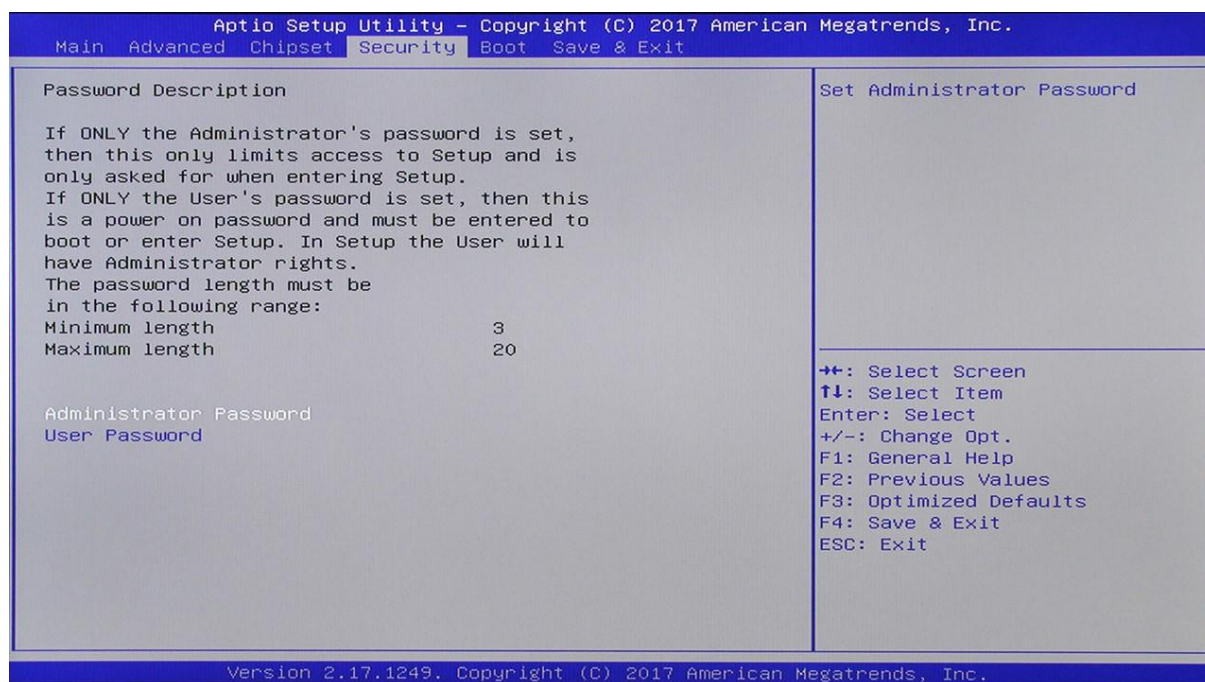


### Administrator Password

This option is used to set the BIOS system Administrator password, which is required to enter the BIOS settings. In this menu, press the <Enter> key, and a password input box will pop-up. Type the password, and confirm it.

## User Password

This menu is used to set the BIOS user password. In this menu, press the <Enter> key, and a password input box will pop-up. Then type the password, and confirm it.

## 6.5 BOOT MENU

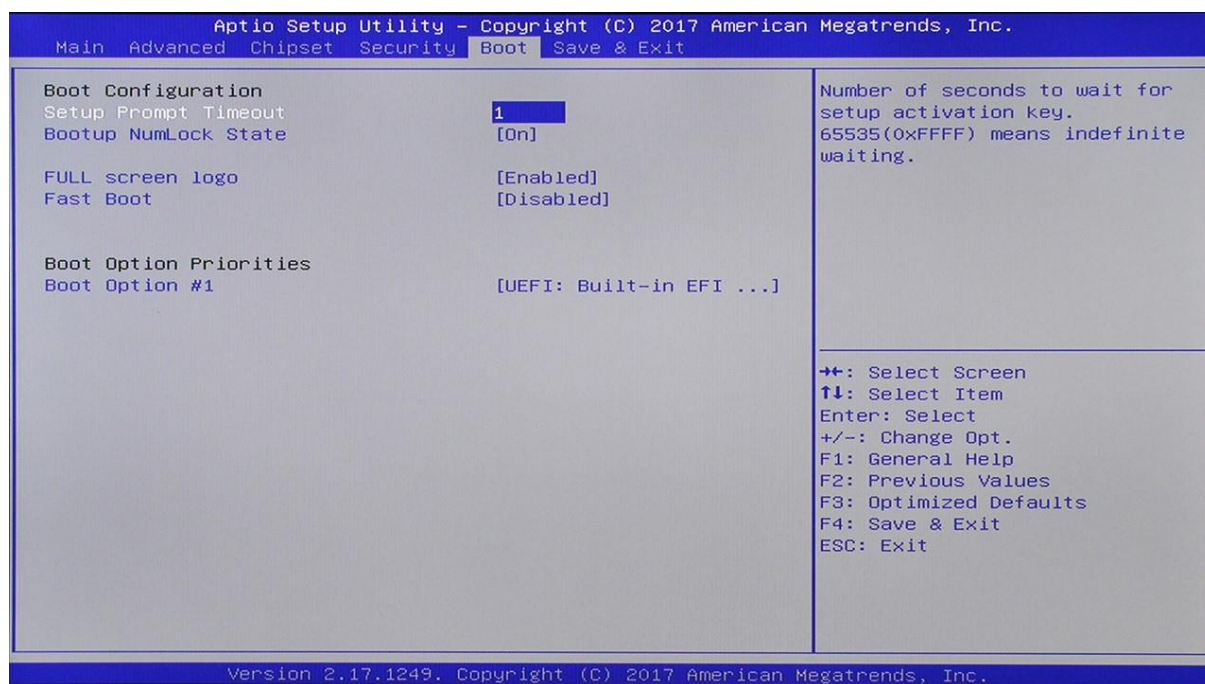

### Setup Prompt Timeout [1]

Set the display time of the prompt, and the unit is number of seconds.

### Bootup NumLock State [On]

Set the numeric keypad to on, and the setting options are [On] and [Off].

### Full-Screen Logo [Disabled]

Set the full-screen LOGO display on / off, and the settings options are [Enabled] and [Disabled].

### Fast Boot [Disabled]


Set the Fast Boot function, the fast boot is the minimum initialization device that can start, and the setting options are [Enabled] and [Disabled].

### Boot Option Priorities

Set the priority of the startup options.



## 6.6 Save & Exit MENU

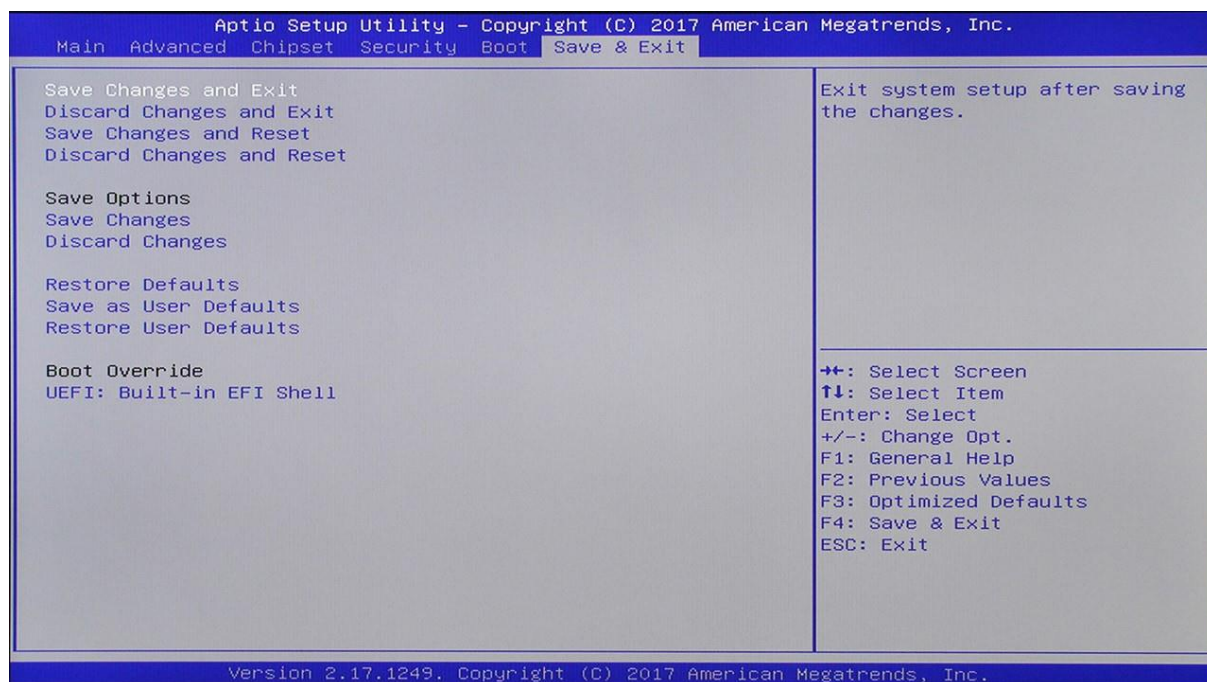

The available options are

- **Save Changes and Exit**
- **Discard Changes and Exit**
- **Launch EFI Shell from "filesystem" device**

## 7 LCD Surface Cleaning

### 1. How to clean the LCD surface properly?

- ✧ Do not spray any liquids on the LCD screen directly, and do not use paper towels, this can cause scratches on the LCD screen.
- ✧ Always apply the liquid to the cloth first and not directly on the parts you are cleaning to avoid dripping the solution directly into your computer or laptop.
- ✧ Stroke the cloth across the display in one direction, moving from the top of the display to the bottom.

### 2. What are some of the basic supplies needed to clean the LCD screen?

- ✧ A soft cotton cloth. When cleaning the LCD screen it is important to use a soft cotton cloth, rather than an old rag. Materials such as paper towels could cause scratches and damage the LCD screen.
- ✧ A solution of water and isopropyl alcohol. This solution can be used along with the soft cotton cloth.
- ✧ Computer wipes. Only use these if they specifically state on the package that they are designed for LCD laptop screens. Computer wipes can come in handy for fast clean-ups or when you want to avoid mixing up a cleaning solution yourself.

### 3. What type of cleaners can be used?

- ✧ Water
- ✧ Vinegar (mixed with water)
- ✧ Isopropyl Alcohol

**NOTE:** The following cleaners are not recommended:

- ✧ Acetone
- ✧ Ethyl alcohol
- ✧ Ethyl acid
- ✧ Ammonia
- ✧ Methyl chloride

## **CE Notice**

This device complies with the requirements of the CE directive.

## **FCC Notice**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **WEEE Notice**

This appliance is labelled in accordance with European Directive 2002/96/EC concerning waste electrical and electronic equipment (WEEE). The Directive determines the framework for the return and recycling of used appliances as applicable throughout the European Union. This label is applied to various products to indicate that the product is not to be thrown away, but rather reclaimed upon end of life per this Directive.



ZKTeco Industrial Park, No. 26, 188 Industrial Road,  
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

[www.zkteco.com](http://www.zkteco.com)



Copyright © 2020 ZKTECO CO., LTD. All Rights Reserved.